


GENERAL

INVERTER

OPERATING MANUAL

使用說明書

COOL MODEL
ROOM AIR CONDITIONER
WALL MOUNTED TYPE
冷氣機型
室內空調機
壁掛式

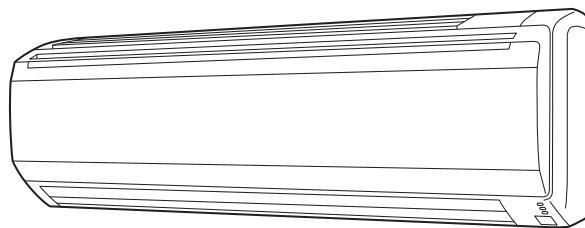

Indoor Unit
室內機組
ASWG18JFCB
ASWG24JFCB
Outdoor Unit
室外機組
AOWG18JFCB
AOWG24JFCB

English

中 語

**KEEP THIS OPERATION MANUAL
FOR FUTURE REFERENCE**
請妥善保管本使用說明書，以便日後參考

FUJITSU GENERAL LIMITED



PART No. 9315345639

使用說明書

壁掛式

冷氣機型

目錄

零件編號 9315345639

安全注意事項	Tc-1
特點與功能	Tc-2
各部分名稱	Tc-3
準備	Tc-5
運轉	Tc-6
定時器操作	Tc-8
睡眠定時器操作	Tc-9
調整氣流循環方向	Tc-10
搖擺動作	Tc-11

省電操作	Tc-11
強制自動操作	Tc-11
清潔與保養	Tc-12
選擇遙控器信號代碼	Tc-14
故障排除	Tc-15
操作提示	Tc-16

安全注意事項

為了防止人身傷害、其他傷害或財物受損，使用本機之前，請仔細閱讀本章節，並遵守以下安全注意事項。
因未能遵守指示而引起的錯誤操作可能導致傷害或損壞，其嚴重性分類如下：



此標誌表示有死亡或嚴重傷害的危險。



此標誌表示「禁止」執行的動作。



此標誌表示有傷害或財物受損的危險。



此標誌表示「強制」執行的動作。



- 本機組內沒有配備用戶可自行維修的零件，請務必聯絡經授權的維修技術人員進行修理、安裝及移機。
安裝或操作不當會導致漏電、觸電或火災。
- 若發生故障，如聞到燒焦味等，請立即停止空調機運轉，關閉斷路器斷開所有電源或拔下插頭，然後與經授權的維修技術人員聯絡。
- 注意不要損壞電源電線。
若電源線損壞，必須由製造商、其服務代理商或具有同等資質的人員進行更換，以免發生危險。
- 在製冷劑外漏的情況下，請務必遠離火或任何易燃物，並與經授權的維修技術人員聯絡。
- 如果看到閃電或聽見雷聲，可能是打雷。
為了防止觸電，請在雷雨期間使用遙控器關閉空調機，且不要觸碰本機組或電源插頭。



- 本機並非設計給身體、感覺或心智功能不足者（包括孩童）、或缺乏經驗及知識者使用，除非有能確保其安全者給予監督或指導，才能使用本機。兒童應在適當的監督下使用本機，以避免讓他們戲玩本機。
- 請勿將本機組安裝在充滿礦物油、含有大量濺油或蒸氣的區域，如工廠、廚房等。
- 請勿透過插拔電源插頭或打開/關閉斷路器來啟動或停止空調機運轉。
- 請勿在本機組附近使用易燃性氣體。
- 請勿長時間讓冷風直接吹到身上。
- 請勿將手指或其他物件插入出風口、開放面板或進風口格柵。
- 請勿用濕的手操作空調機。



- 使用時要不定時地進行室內通風。
- 必須裝上空氣過濾網後才能使用。
- 必須讓任何其他電子設備與本機組保持 1 米以上的距離。
- 當長期不使用空調機時請關閉電源。
- 長期使用後，請檢查安裝支架是否老化，以防本機組掉落。
- 如果室內有嬰兒、兒童、老年人或病人，請細心設定風向和溫度。
- 請保持室外機組的周圍乾淨整潔，不要在其周圍放置物品。
如果機組上覆蓋落葉，可能會有小動物或昆蟲進入機組內部碰觸到電氣元件，導致產品故障。



- 請勿讓氣流直接吹向壁爐或取暖設備。
- 請勿阻塞或遮蓋進風口格柵和出風口。
- 請勿向散熱片施加重壓。
- 請勿在此產品上攀爬及放置或懸掛物品。
- 請勿在此產品上放置花瓶或盛水容器。
- 請勿在此產品放置任何其他電子產品或家用品。
從此產品凝結滴下的水滴可能會將這些用品弄溼，造成您財產的損壞或故障。
- 請勿將此產品直接放在水下。
- 請勿用於儲藏食品、動植物、精密儀器設備、藝術品或其他物件等用途，否則可能會導致這些物品變質。
- 請勿讓氣流直接吹向動植物。
- 請勿飲用空調機排出的水。
- 請勿直接拉扯電源線。
- 安裝或維修設備時，請勿觸碰此產品內建熱交換器的鋁製葉片，避免造成人身傷害。
- 請勿站在不穩固的梯子上操作或清潔本機組。否則可能會翻倒而導致受傷。

特點與功能

■ 省電與舒適功能

變頻器

開機之初，機組以大功率運轉，使室內溫度快速達到所指定的溫度。隨後，機組自動轉換到小功率設置，進行省電、舒適的運作。

省電操作

運動省電操作模式時，室溫會在供冷模式中比設定溫度略高，而在供暖模式中比設定溫度略低。因此，省電模式能比其他正常模式節省更多能源。

水平氣流：供冷

供冷時，請使用水平氣流，使冷空氣不對房間內的人直吹。

全向氣流（搖擺操作）

通過上/下氣流方向搖擺和右/左氣流方向搖擺兩種不同的方法，可以對氣流方向進行三向控制。由於上/下氣流方向擋板可根據冷氣機的操作方式自動操作，因此可以依據操作方式設定氣流方向。

自動切換

運動模式（冷氣、除濕）將自動切換以維持設定的溫度，使溫度一直保持恒定。

靜音運轉

當用送風控制按鈕選擇靜音時，空調機開始進行靜音運轉，室內機組的風量減小以進行更安靜地運轉。

■ 便捷功能

程式時間器

程式時間器可以把開啟時間器和關閉時間器操作組合成一個單一程式來使用。本程式可以在24小時內從關閉時間器到開啟時間器或從開啟時間器到關閉時間器的操作。

睡眠定時器

如果在冷氣模式中按下睡眠按鈕，溫度自動調節裝置的設定值會逐漸升高。當預定時間到達時，空調機將自動關閉。

■ 清潔功能

可拆除式回風格柵

室內單元的回風格柵可拆除，便于做簡單的清潔和保養。

防霉空氣濾網

防霉空氣濾網，令空氣更清新更容易保養。

蘋果茶素抗菌過濾網

蘋果茶素抗菌過濾網使用靜電來清潔含微粒和灰塵的空氣，例如香煙霧和看不見的花粉。過濾器包含對消滅各種細菌很有效的兒茶酸，能抑制吸入過濾器的細菌繼續生長。

負離子除臭過濾器

包含陶瓷超微粒，可產生具有除臭效果的空氣負離子，能吸收並緩和家中異味。

■ 遙控器

無線遙控器

利用無線遙控器可非常方便地控制空調機的運轉。

各部分名稱

圖 1

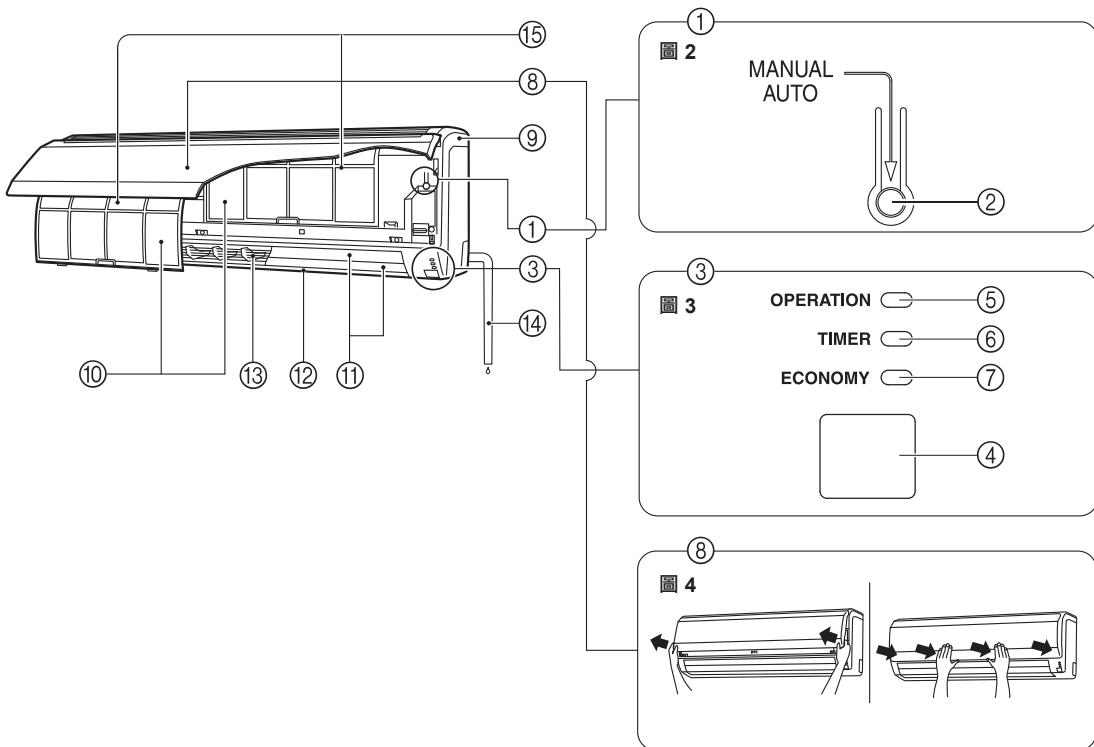


圖 5

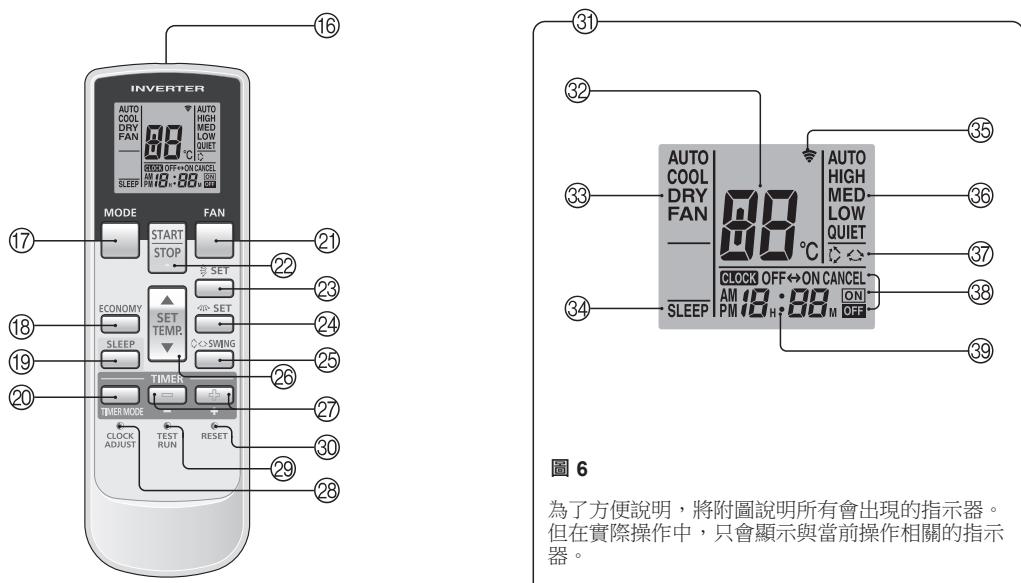


圖 6

為了方便說明，將附圖說明所有會出現的指示器。
但在實際操作中，只會顯示與當前操作相關的指示器。

各部分名稱

圖1 室內機組

① 操作控製面板 (圖2)

② **MANUAL/AUTO (強制自動) 按鈕**

- 按住強制自動按鈕，保持10秒鐘以上，空調即會進入強制制冷狀態。
- 強制制冷功能僅供安裝人員使用。其它人員請勿使用。
- 万一強制制冷功能被起動，請按啟動/停止按鈕令其停止。
- 請按下過濾網指示器重設上的按鈕。

③ 指示燈 (圖3)

④ 遙控信號接收器

⑤ **OPERATION Indicator Lamp (運轉指示燈) (綠)**

⑥ **TIMER Indicator Lamp (定時器指示燈) (橙)**

- 當定時器工作時，定時指示燈將閃爍；當定時器設定後，指示燈會顯示發生的錯誤（請參閱第16頁自動重新啟動）。

⑦ **ECONOMY Indicator Lamp (省電指示燈) (綠)**

- 省電運轉時，省電指示燈會亮起。

⑧ 回風格柵 (圖 4)

⑨ 正面板

⑩ 空氣過濾網

⑪ 氣流方向導向板

⑫ 擴散風葉

⑬ 左右導向板

(位於氣流方向導向板後面)

⑭ 排水管

⑮ 空氣淨化過濾網

圖5 遙控器

⑯ **信號發射器**

⑰ **MODE (功能選擇) 按鈕**

⑯ **ECONOMY (省電) 按鈕**

⑯ **SLEEP (睡眠) 按鈕**

⑯ **SLEEP (定時模式) 按鈕**

⑯ **FAN (風量選擇) 按鈕**

⑯ **START/STOP (啟動 / 停止) 按鈕**

⑯ **SET (氣流方向) 按鈕 (垂直)**

⑯ **SET (氣流方向) 按鈕 (水平)**

⑯ **SWING (搖擺) 按鈕**

⑯ **SET TEMP (溫度) 按鈕 (▲ / ▼)**

⑯ **TIMER SET (定時設定) (+ / -) 按鈕**

⑯ **CLOCK ADJUST (時間設定) 按鈕**

⑯ **TEST RUN (運轉測試) 按鈕**

- 該按鈕用於空調機的安裝，在一般情況下請勿使用，否則可能會導致空調機的溫度調節器無法正常工作。
- 在正常運轉過程中若按了該按鈕，機組將轉換到試運轉模式，室內機組上的運轉指示燈和定時器指示燈將同時閃爍。
- 若要停止試運轉模式，請按啟動／停止按鈕關閉空調機。

⑯ **RESET (復歸) 按鈕**

⑯ **遙控器顯示 (圖6)**

⑯ **溫度顯示**

⑯ **操作模式顯示**

⑯ **睡眠顯示**

⑯ **傳輸指示燈**

⑯ **風速顯示**

⑯ **搖擺顯示**

⑯ **定時器模式顯示**

⑯ **時鐘顯示**

準備工作


開啟電源

1 開啟漏電斷路器。

裝入電池 (AAA/R03/LR03×2)

1 按下並向後滑動電池蓋使之打開。

按下 □ 標記位置時，向箭頭方向滑動。

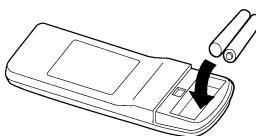

2 裝入電池。

請務必按照正確的極性方向 (+/−) 裝入電池。

3 關上電池蓋。

設定當前時間

1 按CLOCK ADJUST (時間設定) 按鈕 (圖5 ⑧)

利用圓珠筆尖或其它細小物体按該按鈕。

2 用TIMER SET (定時設定) (+ / −) 按鈕 (圖5 ⑦) 將時鐘調節為當前時間。

□ 按鈕：按該按鈕使時間前進。

□ 按鈕：按該按鈕使時間后退。

(每按一次這兩個按鈕，時間分別以 1 分鐘為步長前進/后退。按住這兩個按鈕不放，可分別快速以 10 分鐘為步長改變時間。)


3 按CLOCK ADJUST (時間設定) 按鈕 (圖5 ⑧) 。

將完成時間設定并啟動時鐘。


使用遙控器

- 為了保證正常工作，必須將遙控器指向信號接收器 (圖3 ④) 。
- 有效操作距離：約 7 m 。
- 當空調機正常接收到信號時，將聽到“嗶”聲。
- 若未聽到“嗶”聲，請再次按下遙控器按鈕。


遙控器支架

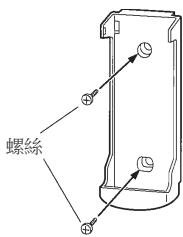

①安裝支架

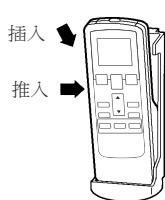

②安放遙控器

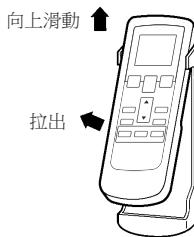

③取出遙控器 (以便手持使用)

小心

- 注意不要讓孩童誤吞入電池。
- 長時間不使用遙控器時，請取出電池，以免造成可能的電解液泄漏而損壞裝置。
- 若泄漏的電池電解液接觸皮膚、眼睛或口，請立即用大量清水沖洗，并儘快就醫。
- 已耗盡的電池要儘快取出並妥善處理，可投入公共電池回收點或送回適當的經銷商。
- 請勿試圖進行電池充電。

切勿混用新舊電池或不同類型的電池。在正常使用條件，電池的使用壽命約 1 年。若遙控器的有效操作距離範圍顯著變小，請更換電池，然後用圓珠筆或其他類似尖狀物體按 RESET (復歸) 按鈕。

選擇運轉模式

1 按下START/STOP (啟動/停止) 按鈕 (圖5 ②) 。


室內機組上的運轉指示燈 (綠) (圖3 ⑤) 亮起。
空調機開始運轉。

2 按下MODE (功能選擇) 按鈕 (圖5 ⑯) 選擇所需要的模式。

每按一次本按鈕，運轉模式按如下順序轉換。



約3秒鐘後，整體的顯示會重新出現。

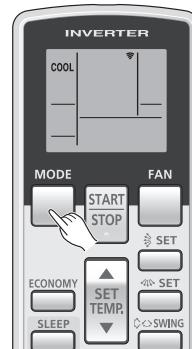

範例：當設定為冷氣時。

設定溫度調節器

按下SET TEMP (溫度) 按鈕 (圖5 ⑯) 。

▲ 按鈕：按此按鈕調高溫度設定。
▼ 按鈕：按此按鈕調低溫度設定。

●溫度調節器設定範圍：

AUTO (自動)18-30°C

Cooling/Dry (冷氣/除濕)18-30°C

在送風模式中不能用溫度調節器來設定室溫（在遙控器顯示屏上不會出現溫度顯示）。

約3秒後，整體的顯示會重新出現。

溫度調節器設定只能作為標準值，可能與實際室溫有少許差異。



範例：當設定為26°C時。


設定送風速度

按FAN (風量選擇) 按鈕 (圖5 ⑯) 。

每按一次該按鈕，送風速度按如下順序轉換。



約3秒鐘後，整體的顯示會重新出現。

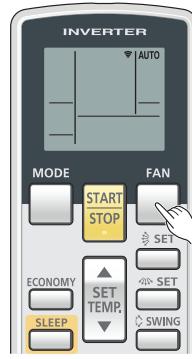

範例：當設定為自動時。

當設定為靜音時

當設定為QUIET (靜音) 時：

開始靜音運轉。室內機組的氣流將減弱以便更安靜地運轉。

- 在除濕模式中不能使用靜音運轉功能。（同樣，在自動模式運轉過程中若選擇除濕模式，也不能使用靜音運轉功能。）
- 在靜音運轉過程中，冷氣性能將稍有降低。使用靜音運轉功能時如果室內沒有冷卻下來，請調整空調機的風速。

停止運轉

按 **START/STOP (開始 / 停止)** 按鈕 (圖 5 ②)。

OPERATION Indicator Lamp 運轉指示燈 (綠色) (圖 3 ⑤) 熄滅。

關於 AUTO CHANGEOVER (自動轉換) 運轉


自動： ● 首先選擇了 **AUTO** (自動切換) 運轉時，風扇會以低速運轉幾分鐘，在該時間內，室內機組將偵測室內條件，並選擇合適的運轉模式。

室溫高於溫度設定中定義的溫度 → 冷氣模式或除濕模式

室溫接近或低於溫度設定中定義的溫度 → 視室外溫度而定

● 當空調機已將室內溫度調節到恆溫器設定的溫度附近時，將開始溫度監控運轉。在監控運轉模式中，風扇將以低速運轉。若隨後室溫發生變化，空調機將再次選擇合適的運轉 (冷氣) 模式，將溫度調節到恆溫器所設定的值。

● 若機組自動選擇的模式不是您想要的模式，請在各運轉模式 (冷氣、除濕、送風) 中選擇所需模式。

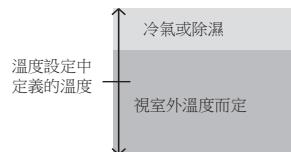

關於模式運轉

冷氣： ● 為房間供冷。

除濕： ● 除濕的同時，為室內提供清涼的環境。

● 除濕模式期間，不能為房間供暖。

● 除濕模式期間，機組將以低速運轉；為了調節室內濕度，室內機組的風扇可能不定時停止運轉。另外，當調節室內濕度時，風扇可能以極低的速度運轉。

● 選擇了除濕模式時，無法手動調節風速。

送風： ● 用於使整個房間保持空氣流通。

在冷氣/除濕模式中：

請將恆溫器設定為低於當前室內溫度。若恆溫器設定為高於實際室內溫度，冷氣和除濕模式將不會運轉 (在冷氣模式中，只有送風會運轉)。

在送風模式中：

機組無法為房間供暖或供冷。

定時器操作

在使用時間器功能之前，確認遙控器被設定成正確的目前時間（[第5頁](#)）。

使用開啟時間器或關閉時間器

1 按下START/STOP按鈕（[圖5 ②](#)）。
(若機組正在運轉，請跳到步驟2)。
室內機組上的運轉指示燈（綠）（[圖3 ⑤](#)）將亮起。

2 按下TIMER MODE按鈕（[圖5 ⑩](#)）以選擇停止時間器或開機時間器。

每一次按下本按鈕，定時器功能按如下順序變化：



室內機組的TIMER指示燈（橙）（[圖3 ⑥](#)）會點亮。

3 使用TIMER SET按鈕（[圖5 ⑦](#)）以調節希望的關機或開機時間。

在時間顯示閃爍期間進行時間設定（閃爍將持續5秒）。

[+]按鈕：按下增加時間讀數。

[−]按鈕：按下減少時間讀數。

約5秒鐘後，整體顯示將會重新出現。

使用程式時間器

1 按START/STOP按鈕（[圖5 ②](#)）
(若機組正在運轉，請跳到步驟2)。
室內機組上的OPERATION指示燈（綠）（[圖3 ⑤](#)）將亮起。

2 設定關機定時器及開機定時器。

請參照“使用開機定時器或關機定時器”以設定操作方式及時間。

約3秒鐘後，整體顯示將會重新出現。

室內機組的TIMER指示燈（橙）（[圖3 ⑥](#)）會點亮。

3 按下TIMER MODE按鈕（[圖5 ⑩](#)）以選擇PROGRAM（程序）定時器操作

（OFF關 → ON開或OFF關 ← ON開會被顯示）。

顯示屏會交替地顯示“關機定時器”及“開機定時器”的時間，然後固定顯示首選開始操作的時間設定。

● 程序定時器會開始操作。（如果開機定時器被選定為首先運作，顯示屏會固定顯示首先開始操作的時間設定。）

約5秒鐘後，整體顯示將會重新出現。

取消定時器

使用TIMER MODE（定時器）按鈕選擇「CANCEL（取消）」。
空調機會回復正常運轉。

改變定時器設定

執行使用定時器的步驟2與步驟3。

定時器正在運轉時若要停止空調機的運轉 按下START/STOP按鈕。

變更操作環境

如果想變更操作環境（模式、送風速度及溫度調節器設定），定時器設定完成後，等待整體顯示恢復，然後按適當的按鈕，變更為所需的操作環境。

取消定時器

使用TIMER MODE（定時器）按鈕選擇「CANCEL（取消）」。
空調機會回復正常運轉。

改變定時器設定

1. 請參照“使用開機定時器或關機定時器”以選擇改變定時器設定。
2. 按下TIMER MODE（定時器）按鈕以選擇OFF關 → ON開或OFF關 ← ON開。

定時器正在運轉時若要停止空調機的運轉 按下START/STOP按鈕。

變更操作環境

如果想變更操作環境（模式、送風速度及溫度調節器設定），定時器設定完成後，等待整體顯示恢復，然後按適當的按鈕，變更為所需的操作環境。

關於程序定時器

- 程序定時器可以把關機定時器和開機定時器操作組合成一個單一程序來使用。本程序可以在24小時內從關機定時器到開機定時器的操作。
- 首先起用的定時器功能將是最接近現在時間的定時器設定。工作次序已用箭頭顯示于遙控器的顯示屏（OFF（關）→ ON（開））或（OFF（關）← ON（開））。
- 程序定時器的使用例子：
使空調器在入睡後自動停止（關機定時器）然後在早晨起床之前自動啟動（開機定時器）。

睡眠定時器操作

不同於其他定時器功能，睡眠定時器是用來設定空調機運轉至自動停止前的時間長度。

使用睡眠定時器

當空調器在運轉中或停止時，按下**SLEEP**按鈕（圖 5 ⑯）。

室內機組的**OPERATION**指示燈（綠）（圖 3 ⑤）及**TIMER**指示燈（橙）（圖 3 ⑥）會點亮。

取消定時器：

使用**TIMER MODE**按鈕選擇「CANCEL（取消）」。

空調機會回復正常運轉。

定時器正在運轉時若要停止空調機的運轉：

按下**START / STOP**按鈕。

改變定時器設定

再一次按下**SLEEP**按鈕（圖 5 ⑯），然後使用**TIMER SET**按鈕（圖 5 ⑰）以設定時間。

在時間顯示閃爍時，進行時間設定（閃爍持續約5秒）。

[+] 按鈕：按下增加時間讀數。

[-] 按鈕：按下減少時間讀數。

約5秒鐘後，整體顯示將會重新出現。


關於睡眠定時器

為了防止睡眠期間過冷或過熱，睡眠定時器會依據時間設定自動修改溫度調節器的設定。預定時間到達後，空調機將完全關閉。

在冷氣/除濕運轉期間：

如果設定了睡眠定時器，溫度調節器的設定值每六十分鐘會自動昇高 1°C 。當溫度調節器的設定值累計昇高 2°C 時，從此時刻起一直到預定時間此設定值將不會再變化，到達預定時間後空調機自動關閉。

睡眠定時器設定

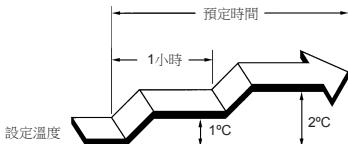

調整氣流循環方向

- 使用遙控器上的氣流方向按鈕調整向上、向下、向左與向右的風向。
- 室內機組開始運轉後並且氣流方向導向板停止運動時，使用氣流方向按鈕。

調整垂直風向

按SET (設定) 按鈕 (垂直) (圖5 ㉓) 。


每按一次此按鈕，風向範圍就會變化一次，變化順序如下：

① \leftrightarrow ② \leftrightarrow ③ \leftrightarrow ④ \leftrightarrow ⑤ \leftrightarrow ⑥

風向設定類型：

①、②、③、④、⑤、⑥：冷氣/除濕/送風模式期間

遙控器上的顯示不改變。

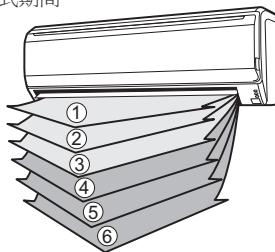

- 在上述範圍內調整風向。
- 垂直風向依據所選的運轉類型自動設定，如下所示。
冷氣／除濕模式：水平風向①
- 在自動模式運轉期間，開始運轉後的第一分鐘內風向是水平①；在此期間無法調整風向。
- 方向① \leftrightarrow ②
只有氣流方向導向板的方向會改變；噴霧器的方向不改變。


調整水平風向

按SET (設定) 按鈕 (水平) (圖 5 ㉔) 。

- 每次按該按鈕時，風向會如下改變：

① \leftrightarrow ② \leftrightarrow ③ \leftrightarrow ④ \leftrightarrow ⑤

遙控器上的顯示不改變。

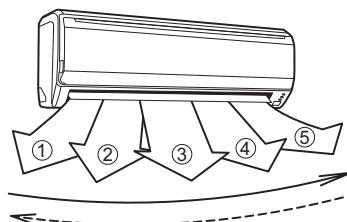

⚠ 警告

- 切勿將手指或異物放入出風口，否則，由於內部送風的轉速很高，可能導致人身傷害。

- 請務必使用遙控器上的氣流方向按鈕調整垂直氣流導向板。如果用手直接調整導向板，可能會造成不正常的運轉；萬一出現這種情況，請關機，然後重新啟動。導向板又會恢復正常運轉。
- 在冷氣和除濕模式期間，不要長時間地將氣流方向導向板設定在送風範圍（④-⑥）內，否則可能在出口導向板附近凝結水蒸汽，並可能從空調機滴下水滴。在冷氣和除濕模式期間，如果氣流方向導向板處於送風範圍超過20分鐘，將自動返回位置③。
- 如果室內有嬰兒、兒童、老年人或病人，請細心設定風向與室溫。

搖擺動作

 
執行該步驟之前，請先啟動空調機。

選擇搖擺操作

按SWING按鈕 (圖5 ②) 。

SWING顯示 (圖6 ⑧) 將亮起。

每次按SWING按鈕時，搖擺操作會按如下順序改變。



停止搖擺操作

按SWING按鈕並選擇停止。

風向將恢復到開始搖擺之前的設定。

關於搖擺動作

- 上/下搖擺：根據當前風向使用下列範圍開始搖擺運動。
風向為1至4 (用於冷氣、除濕)
在水平位置上的向上氣流方向導向板，向下氣流方向導向板運動 (搖擺)，將氣流擺向更大的區域。
- 左/右搖擺：氣流方向導向板在左/右風向上運動 (搖擺)。
- 上/下/左/右搖擺：氣流方向導向板在上/下/左/右風向上運動 (搖擺)。

- 空調風扇未運轉時，或者於低速運動時搖擺運動可能會暫時停止。
- 如果在上/下搖擺運動過程中按下SET按鈕 (垂直)，上/下搖擺運動將停止；並且如果在左/右搖擺運動過程中按下SET按鈕 (水平)，左/右搖擺運動將停止。

省電操作

在執行該步驟前開始空調機操作。

使用省電操作

按下ECONOMY按鈕 (圖5 ⑮) 。

ECONOMY指示燈 (綠) (圖3 ⑦) 將亮起。

開始省電運動。

停止省電操作

再次按下ECONOMY按鈕 (圖5 ⑮) 。


ECONOMY指示燈 (綠) (圖3 ⑦) 將熄滅。

開始正常運動。

關於省電操作

在單機式的情況下，省電操作的最大輸出約是空調機在正常供冷和供暖操作時的70%。

- 如果在省電操作期間，房間無法變冷，請選擇正常操作。
- 在自動模式的監視期間，即使按下省電按鈕而選擇了省電操作，空調機將不會切換至省電操作。
- 運轉省電操作模式時，室溫會在供冷模式中比設定溫度略高。因此，省電模式能比其他正常模式節省更多能源。
- 在分離式空調機的情況下，只有設定的室內機組可以使用省電操作模式。

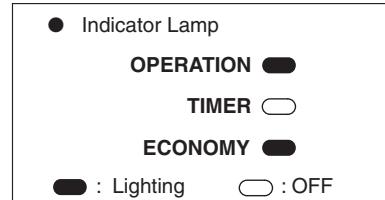

強制自動操作

萬一遙控器丟失或由於其他原因不能使用，可以使用強制自動操作。

如何使用主單元控制裝置

在主單元控制面板上按下MANUAL AUTO按鈕 (圖2 ②) 3到10秒之間。

若要停止強制自動操作，再按一次MANUAL AUTO按鈕 (圖2 ②) 。

- 當使用主單元上的控制裝置操作空調機，其運動模式與選擇遙控器上的AUTO (自動) 模式時相同 (請參閱第7頁)。
- 送風速度被選擇為“AUTO (自動)”，溫度調節器設定為標準。(24°C)


⚠ 小心

- 清潔空調機之前一定要關閉空調機，並拔下電源線。
- 確定回風格柵（圖1 ⑧）安裝牢固。
- 拆卸及重新安裝空氣過濾網時，身體請勿接觸熱交換器，否則可能導致人身傷害。

清潔回風格柵

1. 拆除回風格柵。

- ① 將手指放在格柵面板的下方兩端，然後向前提起；如果格柵在移動過程中卡住，請繼續向上提起以拆除。
- ② 拉過中間拉手並打開回風格柵，使其變為水平。

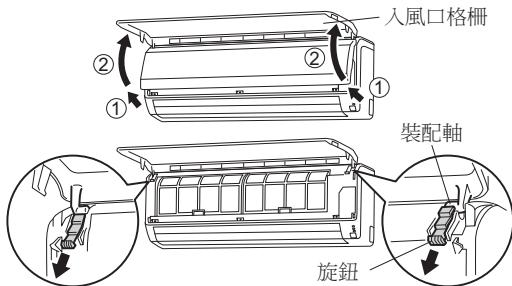


2. 清洗回風格柵。

使用吸塵機清除聚積塵埃，再用蘸濕暖水的清潔及柔軟布料擦拭回風格柵，最後使用乾而柔軟布料抹乾。

3. 裝回回風格柵。

- ① 一直拉動捏手。
- ② 將格柵保持水平，並將左側和右側安裝軸放入面板頂部的軸承中。
- ③ 按圖中箭頭所示的位置關閉回風格柵。

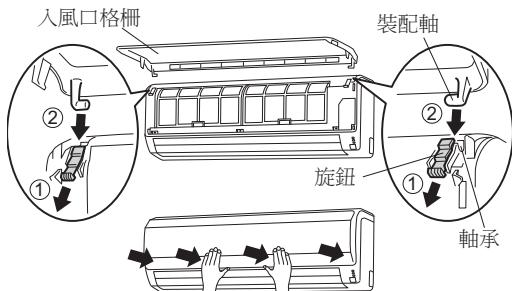

清潔空氣過濾網

1. 開啟回風格柵及取下空氣過濾網。

提升空氣過濾網把柄脫離低位的2個鉤及拉出。

空氣過濾網把柄



2. 用吸塵機或清洗方法清理塵埃。

清理後，在陰涼處徹底吹乾空氣過濾網。

3. 裝回空氣過濾網及回風格柵。

- ① 裝空氣過濾網的左右兩邊邊緣平衡插入槽位，確實空氣過濾網固定於鉤上。



② 然後關閉回風格柵。

（以上例子並沒有安裝回風格柵。）


- 用吸塵機或中性液體清潔劑清除聚積塵埃，在陰涼處吹乾空氣過濾網後，裝回空調器。
- 當空氣過濾網聚積塵埃時，會引起送風量減少及噪音量上升。
- 在正常的使用環境下，空氣過濾網必須2星期清潔一次。
- 請勿在入風口格柵打開時操作空調機。

- 長期使用後，機體裡面會積聚灰塵，這將降低空調機效能。除了您自己的清潔與保養之外，我們建議定期檢查機體。如需詳細資訊，請諮詢專業服務人員。
- 清潔機體時，請勿使用溫度超過40°C的熱水、粗糙的研磨清潔劑或苯及稀釋劑等揮發性介質。
- 請勿使機體接觸液體殺蟲劑或頭髮定型劑。
- 如果要將空調機關閉一個月以上，請首先以送風模式運轉大約半天，使空調機內部各部分充分乾燥。

清潔與保養


安裝空氣淨化過濾網

1. 打開回風格柵，卸下空氣過濾網。

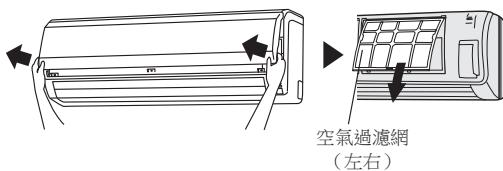


2. 安裝空氣淨化過濾網組件 (2組)。

① 將空氣淨化過濾網放入空氣淨化過濾網框架中。

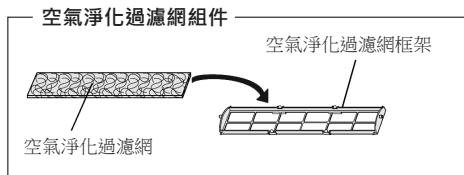


② 將空氣淨化過濾網兩端的插鎖嵌入位于空氣淨化過濾網框架背面的2個掛鉤中。

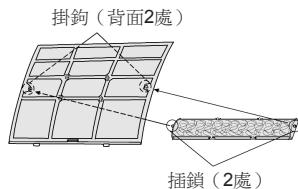


注意空氣淨化過濾網不能從空氣淨化過濾網框架凸出。

③ 將空氣淨化過濾網框架上下的6個固定部嵌入空氣過濾網的掛鉤中。

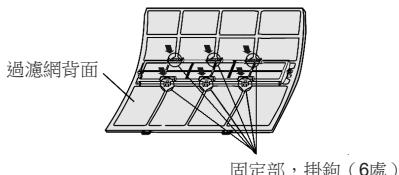

3. 安裝2張空氣過濾網，關閉回風格柵。

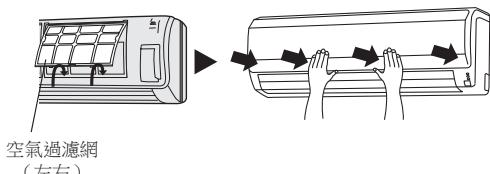


● 使用空氣淨化過濾網時，將風速設定為“高速”，可以獲得更佳效果。

更換污染的空氣淨化過濾網

請用以下零件（另行購買）更換過濾網。

- 蘋果茶素抗菌過濾網：UTR-FA13-1
- 負離子除臭過濾網：UTR-FA13-2


1. 打開回風格柵，卸下空氣過濾網。

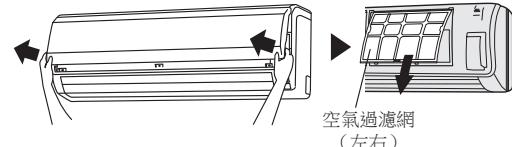

2. 更換2張新的空氣淨化過濾網。

- ① 按照與安裝時相反的順序，拆下舊的空氣淨化過濾網。
- ② 按照與安裝空氣淨化過濾網組件相同的方法安裝。

3. 安裝2張空氣過濾網，關閉回風格柵。

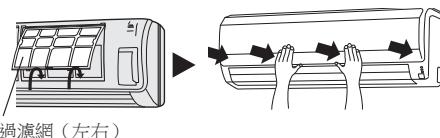

關於空氣淨化過濾網

蘋果茶素抗菌過濾網 (一片)

- 空氣淨化過濾網屬於不可回收過濾網。（無法清洗及重複使用。）
- 關於空氣淨化過濾網的儲存，包裝打開後應盡快使用。（打開包裝後，閑置過濾網的空氣淨化效果會降低）
- 通常每三個月更換一次過濾網。

請購買專用空氣淨化過濾網 (UTR-FA13-1) (單獨出售) 來更換用盡的空氣淨化過濾網。

[負離子除臭過濾網 (一片) - 發藍光]

- 過濾網應每三年左右更換一次，才能保持除臭效果。
- 過濾網框架不是一次性產品。

更換過濾網時請購買專用除臭過濾網 (UTR-FA13-2) (單獨出售)。


負離子除臭過濾網保養

為保持除臭效果，請按以下方式每三個月清潔一次過濾網。

- ① 拆除除臭過濾網。
- ② 用水清洗並晾干。
 - 1) 用高壓熱水淹沒過濾網，直到過濾網表面被水覆蓋。請用稀釋後的中性清潔劑清洗。（切勿刮擦，否則會損害除臭效果。）
 - 2) 水流沖洗。
 - 3) 置於陰涼處，晾干。
- ③ 重新安裝負離子除臭過濾網。

過濾網指示器重設 (特殊設定)

- 如果在安裝時正確設定便可使用。
使用此功能時，請聯絡合資格的維修人員。
- 到了該清潔過濾網的時候，便會亮起。
清潔過濾網時，請參閱「清潔與保養」。
清潔之後，在室內機組上按下MANUAL AUTO (強制自動) 按鈕 (圖2 ②) 2秒或以下。

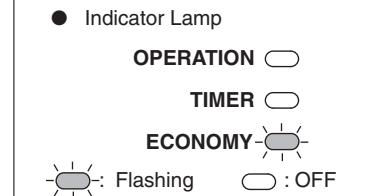

選擇遙控器信號代碼

當室內安裝 2 台或更多空調機而遙控器操作的不是您設定的空調機時，請變更遙控器信號代碼，以僅操作您要設定的空調機 (有四個選擇可用)。

當室內安裝 2 台或更多空調機時，若要設定每台空調機的信號代碼，請洽詢經銷商。

選擇遙控器信號代碼

根據下列步驟選擇遙控器的信號代碼。(請注意，如果空調機尚未設定信號代碼，則空調機無法接收信號代碼。)

- 遙控器顯示器上顯示時鐘之後，再按下START/STOP按鈕。
- 按住MODE按鈕5秒以上，顯示目前的信號代碼 (初始設定為 **A**)。
- 按溫度 (**▲** / **▼**) 按鈕，在 **A**→**b**→**c**→**d** 間變更信號代碼。將顯示器上的代碼與空調機信號代碼對應起來。
- 再次按下MODE按鈕，返回時鐘畫面。號代碼即會變更。



- 如果您在信號代碼顯示之後 30 秒內沒有按下任何按鈕，系統會返回最初的時鐘畫面。在這種情況下，請從步驟 1 重新開始。
- 裝運前，空調機的信號代碼設定為 **A**。若要變更信號代碼，請洽詢經銷商。
- 更換遙控器內的電池後，遙控器會重設為信號代碼 **A**。如果使用的信號代碼不是信號代碼 **A**，請在更換電池後重設信號代碼。如果不知道空調機信號代碼設定，請嘗試每一個信號代碼 (**A**→**b**→**c**→**d**)，直至找出能夠使空調機運轉的代碼。

故障排除

⚠ 警告

萬一發生故障（發生焦糊味等）時，請立即停止運轉，拔出電源線插頭，然後與經授權的維修技術人員聯繫。
僅關閉機組的電源開關還不能完全斷開機組的電源。請務必拔出電源插頭或關閉斷路器，以保證完全斷開機組電源。

在請求維修服務之前，請先進行如下檢查：

	現象	問題	參考頁
正常功能	無法立即運轉：	<ul style="list-style-type: none">若關閉機組然後立即開機，為了保護保險絲，3分鐘內壓縮機不會運轉。每當斷開電源插頭然後重新連接到電源插座時，在3分鐘之內保護電路將發揮作用以防止機組在這段時間內運轉。	-
	聽見噪音：	<ul style="list-style-type: none">在運轉過程中或剛停止機組時，可能會聽到空調器管道內水流動的聲音。另外，開始運轉後的2至3分鐘內，噪音可能特別明顯（冷媒流動的聲音）。在運轉過程中，可能會聽到輕微吱吱聲。這是由於溫度變化引起前蓋發生微小伸縮的結果。	-
	氣味：	<ul style="list-style-type: none">可能會從室內機組中發出某些氣味。這種氣味是由於房間的氣味（傢俱、香煙等）被吸入空調器的結果。	-
	發出煙霧或蒸汽：	<ul style="list-style-type: none">冷氣或除濕運轉過程中，可能會看到室內機組發出淡淡的煙霧。這是由於空調機排出的空氣被房間空氣突然冷卻而產生的冷凝或煙霧。	-
	風量較弱或停止：	<ul style="list-style-type: none">在除濕運轉過程中或當機組正在監控室內溫度時，送風將以非常低的速度運轉。在靜音運轉過程中，送風將以非常低的速度運轉。在溫度監控自動運轉過程中，送風將以非常低的速度運轉。	7 6 7
再檢查一次	完全無法運轉：	<ul style="list-style-type: none">是否已將電源插頭從電源插座拔出？是否存在電源故障？是否保險絲被燒斷或斷路器已斷開？是否定時器正在發揮作用？	- 8-9
	冷氣性能不佳	<ul style="list-style-type: none">空氣過濾網是否變髒？入風格柵或出風口是否被阻擋？室溫設置（溫度調整器）是否正確？門窗是否開著？在冷氣運轉時，是否有強烈陽光從窗戶射入？（請關上窗簾）在冷氣運轉時，房間裏是否有加熱設備和電腦，或房間裏是否有許多人？機組是否被設定為靜音運轉？	- 6
	機組運轉情況與遙控器設置不一致：	<ul style="list-style-type: none">遙控器的電池是否已耗盡？遙控器的電池安裝是否正確？	5

進行上述檢查後若故障仍然存在，或者發現有焦糊味，或者運轉指示燈（圖3 ⑤）與定時指示燈（圖3 ⑥）閃爍，及省電指示燈（圖3 ⑦）快速閃爍，請立即停止運轉，關閉電氣斷路器，然後與授權的維修人員聯繫。

操作提示

自動重新啟動

當出現斷電時

- 當空調機由於電源故障而斷電時，電源恢復後，空調機將自動按此前的模式重新啟動。
- 在定時器啟動後若出現斷電，定時器將被歸零，機組將按照新的時間設置開始（或停止）運轉。在這種情況下（發生這種定時器故障時），TIMER指示燈將閃爍（請參閱第3頁）。
- 同時使用其他電器（電動刮鬍刀等）或在附近使用無線電信號發射器時，可能會導致空調機故障。在這種情況下，請暫時拔出電源插頭，隨後再接通電源，然後用遙控器恢復運轉。

 **GENERAL**
FUJITSU GENERAL LIMITED
3-3-17, Suenaga, Takatsu-ku, Kawasaki 213-8502, Japan


GENERAL

INVERTER

OPERATING MANUAL

使用說明書

COOL MODEL
ROOM AIR CONDITIONER
WALL MOUNTED TYPE
冷氣機型
室內空調機
壁掛式

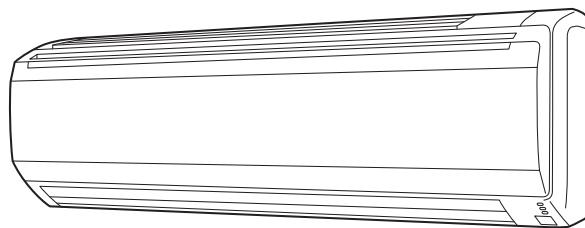

Indoor Unit
室內機組
ASWG18JFCB
ASWG24JFCB
Outdoor Unit
室外機組
AOWG18JFCB
AOWG24JFCB

English

中 語

**KEEP THIS OPERATION MANUAL
FOR FUTURE REFERENCE**
請妥善保管本使用說明書，以便日後參考

FUJITSU GENERAL LIMITED



PART No. 9315345639

OPERATING MANUAL

Wall Mounted Type

Cool model

CONTENTS

PART No. 9315345639

SAFETY PRECAUTIONS.....	En-1
FEATURES AND FUNCTIONS	En-2
NAME OF PARTS	En-3
PREPARATION	En-5
OPERATION.....	En-6
TIMER OPERATION	En-8
SLEEP TIMER OPERATION	En-9
ADJUSTING THE DIRECTION OF AIR CIRCULATION	En-10
SWING OPERATION	En-11
ECONOMY OPERATION	En-11
MANUAL AUTO OPERATION	En-11
CLEANING AND CARE	En-12
SELECTING THE REMOTE CONTROLLER	En-14
CUSTOM CODE.....	En-14
TROUBLESHOOTING	En-15
OPERATING TIPS.....	En-16

SAFETY PRECAUTIONS

To prevent personal injury to others, or property damage, read this section carefully before you use this product, and be sure to comply following safety precautions.

Incorrect operation due to failure to follow the instructions may cause harm or damage, the seriousness of which is classified as follows:

⚠ WARNING

This mark warns of death or serious injury.



This mark denotes an action that is PROHIBITED.

⚠ CAUTION

This mark warns of injury or damage to property.



This mark denotes an action that is COMPULSORY.

⚠ WARNING

- This product contains no user-serviceable parts. Always consult authorized service personnel for repairing, installation, and relocation of this product.

Improper installation or handling will cause leakage, electric shock, or fire.

- In the event of a malfunction such as burning smell, immediately stop operation of the air conditioner, and disconnect all the power supply by turning off the electrical breaker or disconnecting the power plug. Then consult authorized service personnel.
- Take care not to damage the power supply cable. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- In the event of refrigerant leakage, be sure to keep away from fire or any flammables, and consult authorized service personnel.

- If you see lightning or hear thunder, there might be a lightning strike. To prevent electric shock hazard, turn off the air conditioner by using the remote controller, and do not touch this product or the power plug during thunderstorm.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- Do not install this product in area filled with mineral oil such as a factory or area containing a large amount of splashed oil or steam such as a kitchen.
- Do not start or stop the operation of this product by inserting or pulling out the power plug, or by turning on or off the circuit breaker.
- Do not use inflammable gases near this product.
- Do not expose yourself directly to the cooling airflow for many hours.
- Do not insert your fingers or any other objects into outlet port, open panel, or intake grille.
- Do not operate with wet hands.

⚠ CAUTION

- Provide occasional ventilation during use.
- Always operate this product with air filters installed.
- Ensure that any electronic equipment is at least 1 meter away from either this product.
- Turn off power source when not using this product for extended periods.
- After long period of use, check whether the installation stand does not deteriorate to prevent this product from falling down.
- The airflow direction and the room temperature should be carefully considered when you use this product in a room with infants, children, elderly or sick persons.
- Keep clean and tidy around the outdoor unit, and do not place the things around it.

If it is covered with fallen leaves, there could be an infiltration of small animals or insects whose contact with the internal electrical components leads to the product malfunction.

- Do not direct the airflow at fireplaces or heating apparatus.
- Do not block or cover the intake grille and the outlet port.
- Do not apply any heavy pressure to radiator fins.
- Do not climb on, place objects on, or hang objects from this product.
- Do not place vase or water container on this product.
- Do not place any other electrical products or household belongings under this product.

Dripping condensation from this product might get them wet, and may cause damage or malfunction of your property.

- Do not expose this product directly to water.
- Do not use this product for preservation of food, plants, animals, precision equipment, art work, or other objects. This may cause quality deterioration of those items.
- Do not expose animals or plants to the direct airflow.
- Do not drink the drainage from the air conditioner.
- Do not pull the power supply cable.
- Do not touch the aluminum fins of heat exchanger built-in this product to avoid personal injury when you install or maintain the unit.
- Do not stand on unstable steps when operating or cleaning this product. It may overturn and can cause the injury.

FEATURES AND FUNCTIONS

■ Energy saving and Comfortable function

INVERTER

At the start of operation, large amount of power is used to bring the room quickly to the desired temperature. Afterwards, the unit automatically switches to a low power setting for economic and comfortable operation.

ECONOMY OPERATION

When ECONOMY operation mode is operated, the room temperature will be little higher than the set-temp under cooling mode. Therefore, the ECONOMY mode is able to save more energy than other normal mode.

HORIZONTAL AIRFLOW: COOLING

For cooling, use horizontal airflow so the cool air does not blow directly on the occupants in the room.

OMNI-DIRECTIONAL AIR FLOW (SWING OPERATION)

3-dimensional control over air direction swing is possible through dual use of both an UP/DOWN air direction swing and RIGHT/LEFT air direction swing. Since UP/DOWN air direction flaps operate automatically according to the operating mode of the unit, it is possible to set air direction based on the operating mode.

SUPER QUIET OPERATION

When the FAN button is used to select QUIET, the indoor unit begins super quiet operation; the indoor unit's airflow is reduced to produce quieter operation.

AUTO CHANGEOVER

The operation mode (cooling, dry) is switched automatically to maintain the set temperature, and the temperature is kept constant at all times.

■ Convenient function

PROGRAM TIMER

The program timer allows you to integrate OFF timer and ON timer operations in a single sequence. The sequence can involve 1 transition from OFF timer to ON timer, or from ON timer to OFF timer, within a 24 hour period.

SLEEP TIMER

When the SLEEP timer button is pressed during cooling or dry mode, the thermostat setting is gradually raised during the period of operation. When the set time is reached, the unit automatically turns off.

■ Clean function

REMOVABLE INTAKE GRILLE

The indoor unit's intake grille can be removed for easy cleaning and maintenance.

MILDEW-RESISTANT FILTER

The AIR FILTER has been treated to resist mildew growth, thus allowing cleaner use and easier care.

POLYPHENOL CATECHIN AIR CLEANING FILTER

The polyphenol catechin air cleaning filter uses static electricity to clean fine particles and dust in the air such as tobacco smoke and plant pollen that are too small to see. The filter contains catechin, which is highly effective against various bacteria by suppressing the growth of the bacteria adsorbed to the filter. Note that when the air cleaning filter is installed, the amount of air produced decreases, causing a slight decrease in the indoor unit's performance.

NEGATIVE AIR IONS DEODORIZING FILTER

It comprises pottery super micro particles which can produce negative air ions having the effect of deodorizing and can absorb and remit the peculiar smell at home.

■ Remote controller

WIRELESS REMOTE CONTROLLER

The wireless remote controller allows convenient control of air conditioner operation.

NAME OF PARTS

Fig. 1

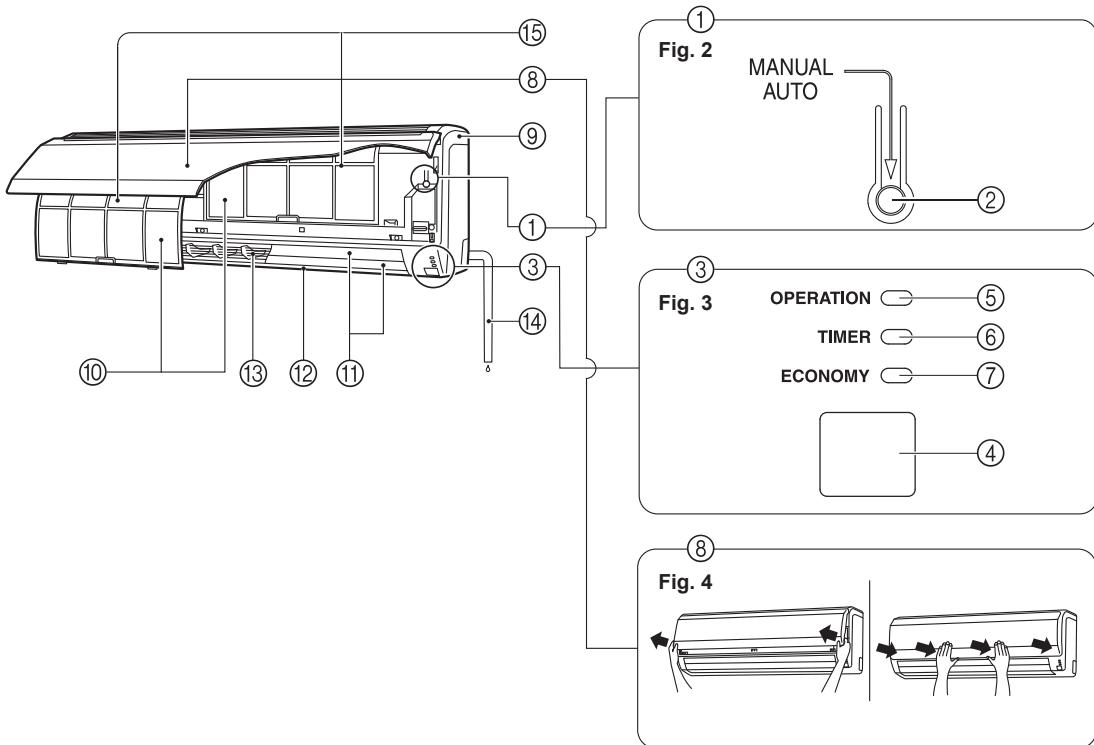


Fig. 5

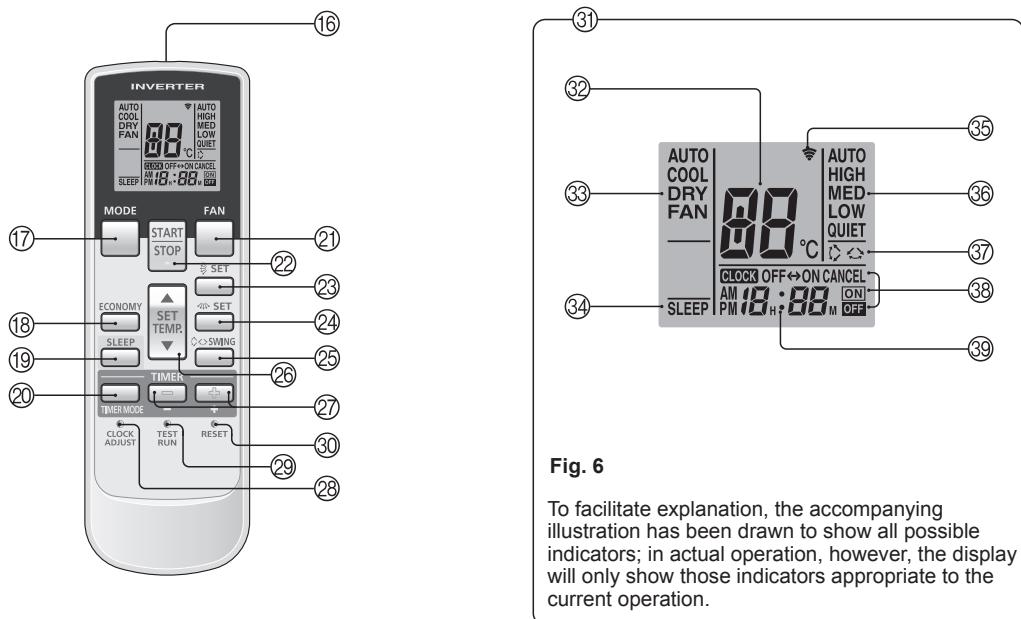


Fig. 6

To facilitate explanation, the accompanying illustration has been drawn to show all possible indicators; in actual operation, however, the display will only show those indicators appropriate to the current operation.

NAME OF PARTS

Fig. 1 Indoor Unit

① Operating Control Panel (Fig. 2)

② MANUAL AUTO button

- When the MANUAL AUTO button is pressed in for more than 10 seconds, the forced cooling operation will start.
- The forced cooling operation is used at the time of installation.
- Only for authorized service personnel's use.
- When the forced cooling operation starts by any chance, press the START/STOP button to stop the operation.
- Filter Indicator Reset
After cleaning, press the MANUAL AUTO button for 2 seconds or less.

③ Indicator (Fig. 3)

④ Remote Control Signal Receiver

⑤ OPERATION Indicator Lamp (green)

⑥ TIMER Indicator Lamp (orange)

- If the TIMER indicator lamp flashes when the timer is operating, it indicates that a fault has occurred with the timer setting (See Page 16 Auto Restart).

⑦ ECONOMY Indicator Lamp (green)

- ECONOMY indicator lamp lights when ECONOMY OPERATION is operating.

⑧ INTAKE GRILLE (Fig.4)

⑨ Front Panel

⑩ Air Filter

⑪ Airflow Direction Louver

⑫ Power Diffuser

⑬ Right-Left Louver (behind Airflow Direction Louver)

⑭ Drain Hose

⑮ Air Cleaning Filter

Fig. 5 Remote Controller

⑯ Signal Transmitter

⑰ MODE button

⑱ ECONOMY button

⑲ SLEEP button

⑳ TIMER MODE button

㉑ FAN button

㉒ START/STOP button

㉓ SET button (Vertical)

㉔ SET button (Horizontal)

㉕ SWING button

㉖ SET TEMP. button (▲ / ▼)

㉗ TIMER SET (± / -) button

㉘ CLOCK ADJUST button

㉙ TEST RUN button

- This button is used when installing the air conditioner, and should not be used under normal conditions, as it will cause the indoor unit's thermostat function to operate incorrectly.
- If this button is pressed during normal operation, the indoor unit will switch to test operation mode, and the Indoor Unit's OPERATION Indicator Lamp and TIMER Indicator Lamp will begin to flash simultaneously.
- To stop the test operation mode, press the START/STOP button to stop the air conditioner.

㉚ RESET button

㉛ Remote Controller Display (Fig.6)

㉜ Temperature SET Display

㉝ Operation Mode Display

㉞ SLEEP TIMER Display

㉟ Transmit Indicator

㉞ Fan Speed Display

㉞ SWING Display

㉞ Timer Mode Display

㉞ Clock Display

PREPARATION

Turn on the Power

1 Turn on the circuit breaker

Load Batteries (AAA/R03/LR03 × 2)

1 Press and slide the battery compartment lid on the reverse side to open it.

Slide in the direction of the arrow while pressing the  mark.



2 Insert batteries.

Be sure to align the battery polarities (+/-) correctly.

3 Close the battery compartment lid.

Set the Current time

1 Press the CLOCK ADJUST button (Fig. 5 ⑧).

Use the tip of a ball-point pen or other small object to press the button.

2 Use the TIMER SET (+ / -) buttons (Fig. 5 ⑦) to adjust the clock to the current time.

 button: Press to advance the time.

 button: Press to reverse the time.

(Each time the buttons are pressed, the time will be advanced/reversed in 1 minute increments; hold the buttons depressed to change the time quickly in 10 minute increments.)

3 Press the CLOCK ADJUST button (Fig. 5 ⑧) again.

This completes the time setting and starts the clock.

CAUTION

- Take care to prevent infants from accidentally swallowing batteries.
- When not using the Remote Controller for an extended period, remove the batteries to avoid possible leakage and damage to the unit.
- If leaking battery fluid comes in contact with your skin, eyes, or mouth, immediately wash with copious amounts of water, and consult your physician.
- Dead batteries should be removed immediately and disposed of properly, either in a battery collection receptacle or to the appropriate authority.
- Do not attempt to recharge dry batteries.


Never mix new and used batteries, or batteries of different types.

Batteries should last about 1 year under normal use. If the Remote Controller's operating range becomes appreciably reduced, replace the batteries and press the RESET button with the tip of a ball-point pen or other small object.

To Use the Remote Controller

- The Remote Controller must be pointed at signal receiver (Fig. 3 ④) to operate correctly.
- Operating Range: About 7 m.
- When a signal is properly received by the air conditioner, a beeping sound will be heard.
- If no beep is heard, press the Remote Controller button again.

Remote Controller Holder

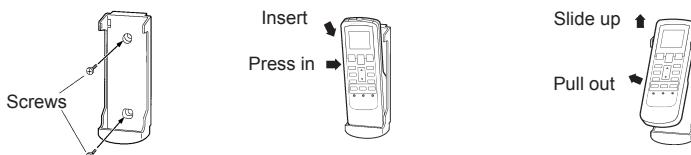

① Mount the Holder. ② Set the Remote Controller. ③ To remove the Remote Controller (when use at hand).

OPERATION

To Select Mode Operation

1 Press the START/STOP button (Fig.5 ②).


The indoor unit's OPERATION Indicator Lamp (green) (Fig. 3 ⑤) will light. The air conditioner will start operating.

2 Press the MODE button (Fig.5 ⑯) to select the desired mode.

Each time the button is pressed, the mode will change in the following order.

→AUTO→COOL→DRY→FAN

About 3 seconds later, the entire display will reappear.

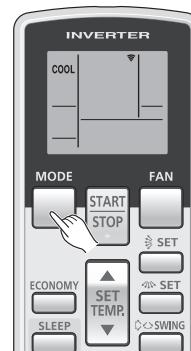

Example: When set to COOL.

To Set the Thermostat

Press the SET TEMP. button (Fig. 5 ⑯).

▲ button: Press to raise the thermostat setting.

▼ button: Press to lower the thermostat setting.


● Thermostat setting range:

AUTO 18 - 30 °C

Cooling/Dry 18 - 30 °C

The thermostat cannot be used to set room temperature during the FAN mode (The temperature will not appear on the Remote Controller's Display).

About 3 seconds later, the entire display will reappear.

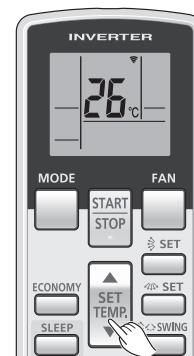

Example: When set to 26 °C.


To Set the Fan Speed

Press the FAN button (Fig. 5 ⑯).

Each time the button is pressed, the fan speed changes in the following order:

→AUTO→HIGH→MED→LOW→QUIET

About 3 seconds later, the entire display will reappear.

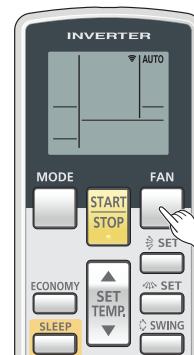

Example: When set to AUTO.

When set to AUTO:

Cooling : As the room temperature approaches that of the thermostat setting, the fan speed becomes slower.

Fan : The fan runs at the low fan speed.

The fan will operate at a very low setting during Monitor operation.

SUPER QUIET Operation

When set to QUIET:

SUPER QUIET operation begins. The indoor unit's airflow will be reduced for quieter operation.

● SUPER QUIET operation cannot be used during Dry mode. (The same is true when dry mode is selected during AUTO mode operation.)

● During SUPER QUIET operation, Cooling performance will be reduced somewhat. If the room does not cool down when using SUPER QUIET Operation, please adjust the air conditioner's Fan Speed.

OPERATION

To Stop Operation

Press the START/STOP button (Fig. 5 ②).

The OPERATION Indicator Lamp (green) (Fig.3 ⑤) will go out.


About AUTO CHANGEOVER Operation

AUTO: ● When AUTO CHANGEOVER operation first selected, the fan will operate at very low speed for about a few minutes, during which time the unit detects the room conditions and selects the proper operating mode.

Room temperature is higher than the define temperature in temperature setting → Cooling mode or Dry mode

Room temperature is close to or lower than the define temperature in temperature setting → Monitor operation

- When the air conditioner has adjusted your room's temperature to near the thermostat setting, it will begin monitor operation. In the Monitor operation mode, the fan will operate at low speed. If the room temperature subsequently changes, the air conditioner will once again select the appropriate operation (Cooling) to adjust the temperature to the value set in the thermostat.
- If the mode automatically selected by the unit is not what you wish, select one of the mode operation (COOL, DRY, FAN).

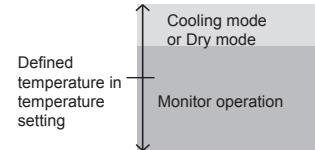

About Mode Operation

Cooling: ● Use to cool your room.

Dry: ● Use for gently cooling while dehumidifying your room.

- You cannot heat the room during Dry mode.

● During Dry mode, the unit will operate at low speed; in order to adjust room humidity, the indoor unit's fan may stop from time to time. Also, the fan may operate at very low speed when adjusting room humidity.

- The fan speed cannot be changed manually when Dry mode has been selected.

Fan: ● Use to circulate the air throughout your room.

During Cooling/Dry mode:

Set the thermostat to a temperature setting that is lower than the current room temperature. The Cooling and Dry modes will not operate if the thermostat is set higher than the actual room temperature (in Cooling mode, the fan alone will operate).

During Fan mode:

You can not use the unit to heat and cool your room.

TIMER OPERATION

Before using the timer function, be sure that the Remote Controller is set to the correct current time (☞ P.5).

 
To Use the ON timer or OFF timer

1 Press the START/STOP button (Fig. 5 ②). (If the unit is already operating, proceed to step 2).

The indoor unit's OPERATION Indicator Lamp (green) (Fig. 3 ⑤) will light.

2 Press the TIMER MODE button (Fig. 5 ⑩) to select the OFF timer or ON timer operation.

Each time the button is pressed the timer function changes in the following order:



The indoor unit's TIMER Indicator Lamp (orange) (Fig. 3 ⑥) will light.

3 Use the TIMER SET buttons (Fig. 5 ⑦) to adjust the desired OFF time or ON time.

Set the time while the time display is flashing (the flashing will continue for about 5 seconds).

[+] button: Press to advance the time.

[-] button: Press to reverse the time.

About 5 seconds later, the entire display will reappear.

To Use the Program timer

1 Press the START/STOP button (Fig. 5 ②). (If the unit is already operating, proceed to step 2).

The indoor unit's OPERATION Indicator Lamp (green) (Fig. 3 ⑤) will light.

2 Set the desired times for OFF timer and ON timer.

See the section "To Use the ON timer or OFF timer" to set the desired mode and times.

About 3 seconds later, the entire display will reappear.

The indoor unit's TIMER Indicator Lamp (orange) (Fig. 3 ⑥) will light.

3 Press the TIMER MODE button (Fig. 5 ⑩) to select the PROGRAM timer operation (OFF → ON or OFF ← ON will display).

The display will alternately show "OFF timer" and "ON timer", then change to show the time setting for the operation to occur first.

- The program timer will begin operation. (If the ON timer has been selected to operate first, the unit will stop operating at this point.)

About 5 seconds later, the entire display will reappear.

About the Program timer

- The program timer allows you to integrate OFF timer and ON timer operations in a single sequence. The sequence can involve 1 transition from OFF timer to ON timer, or from ON timer to OFF timer, within a 24 hour period.
- The first timer function to operate will be the 1 set nearest to the current time. The order of operation is indicated by the arrow in the Remote Controller's Display (OFF → ON, or OFF ← ON).
- One example of Program timer use might be to have the air conditioner automatically stop (OFF timer) after you go to sleep, then start (ON timer) automatically in the morning before you arise.

To Cancel the Timer

Use the TIMER MODE button to select "CANCEL".

The air conditioner will return to normal operation.

To Change the Timer Settings

Perform steps 2 and 3.

To Stop Air Conditioner Operation while the Timer is Operating

Press the START/STOP button.

To Change Operating Conditions

If you wish to change operating conditions (Mode, Fan Speed, Thermostat Setting, SUPER QUIET mode), after making the timer setting wait until the entire display reappears, then press the appropriate buttons to change the operating condition desired.

To Cancel the Timer

Use the TIMER MODE button to select "CANCEL".

The air conditioner will return to normal operation.

To Change the Timer Settings

1. Follow the instructions given in the section "To Use the ON Timer or OFF Timer" to select the timer setting you wish to change.
2. Press the TIMER MODE button to select either OFF → ON or OFF ← ON.

To Stop Air Conditioner Operation while the Timer is Operating

Press the START/STOP button.

To Change Operating Conditions

If you wish to change operating conditions (Mode, Fan Speed, Thermostat Setting, SUPER QUIET mode), after making the timer setting wait until the entire display reappears, then press the appropriate buttons to change the operating condition desired.

SLEEP TIMER OPERATION

Unlike other timer functions, the SLEEP timer is used to set the length of time until air conditioner operate is stopped.

To Use the SLEEP Timer

While the air conditioner is operating or stopped, press the SLEEP button (Fig. 5 ⑯).

The indoor unit's OPERATION Indicator Lamp (green) (Fig. 3 ⑤) lights and the TIMER Indicator Lamp (orange) (Fig. 3 ⑥) light.

To Change the Timer Settings

Press the SLEEP button (Fig. 5 ⑯) once again and set the time using the TIMER SET (+ / -) buttons (Fig. 5 ⑰).

Set the time while the Timer Mode Display is flashing (the flashing will continue about 5 seconds).

[+] button: Press to advance the time.

[-] button: Press to reverse the time.

About 5 seconds later, the entire display will reappear.


About the SLEEP Timer

To prevent excessive cooling during sleep, the SLEEP timer function automatically modifies the thermostat setting in accordance with the set time setting. When the set time has elapsed, the air conditioner completely stops.

During Cooling/Dry operation:

When the SLEEP timer is set, the thermostat setting is automatically raised 1 °C every 1 hour. When the thermostat has been raised a total of 2 °C, the thermostat setting at that time is maintained until the set time has elapsed, at which time the air conditioner automatically turns off.

SLEEP timer setting

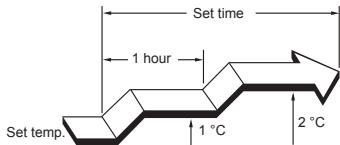

To Cancel the Timer:

Use the TIMER MODE button to select "CANCEL".

The air conditioner will return to normal operation.

To Stop the Air Conditioner During Timer Operation:

Press the START/STOP button.

ADJUSTING THE DIRECTION OF AIR CIRCULATION

- Adjust the up, down, left, and right AIR directions with the AIR DIRECTION buttons on the Remote Controller.
- Use the AIR DIRECTION buttons after the Indoor Unit has started operating and the airflow-direction louvers have stopped moving.

Vertical Air Direction Adjustment

Press the SET button (Vertical) (Fig. 5 ㉓).


Each time the button is pressed, the air direction range will change as follows:

① ←→ ② ←→ ③ ←→ ④ ←→ ⑤ ←→ ⑥

Types of Airflow Direction Setting:

①,②,③,④,⑤,⑥: During Cooling/Dry/Fan mode

The Remote Controller's display does not change.

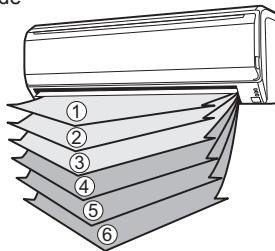

- Use the air direction adjustments within the ranges shown above.
- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.

During Cooling/Dry mode : Horizontal flow ①

- During AUTO mode operation, for the first a few minutes after beginning operation, airflow will be horizontal ①; the air direction cannot be adjusted during this period.

- Direction ① ←→ ②

Only the direction of the Airflow Direction Louver changes; the direction of the Power Diffuser does not change.


Horizontal Air Direction Adjustment

Press the SET button (Horizontal) (Fig. 5 ㉔).

- Each time the button is pressed, the air direction range will change as follows:

① ←→ ② ←→ ③ ←→ ④ ←→ ⑤

The remote controller's display does not change.

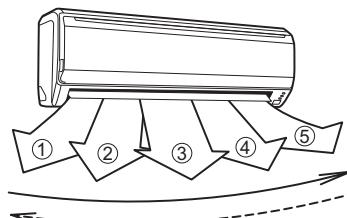

WARNING

Never place fingers or foreign objects inside the outlet ports, since the internal fan operates at high speed and could cause personal injury.

- Always use the Remote Controller's SET button to adjust the vertical airflow louvers. Attempting to move them manually could result in improper operation; in this case, stop operation and restart. The louvers should begin to operate properly again.
- During use of the Cooling and Dry modes, do not set the vertical Airflow Direction Louvers in the range (④ - ⑥) for long periods of time, since water vapour may condense near the outlet louvers and drops of water may drip from the air conditioner. During the Cooling and Dry modes, if the Airflow Direction Louvers are left in the range (④ - ⑥) for more than 20 minutes, they will automatically return to position ③.
- When used in a room with infants, children, elderly or sick persons, the air direction and room temperature should be considered carefully when making settings.

SWING OPERATION

Begin air conditioner operation before performing this procedure.

To select SWING Operation

Press the SWING button (Fig. 5 ②).

The SWING Display (Fig. 6 ⑦) will light.

Each time the SWING button is pressed, the swing operation will change in the following order.



To stop SWING Operation

Press the SWING button and select STOP.

Airflow direction will return to the setting before swing was begun.

About Swing Operation

- Up/down swing: Swing operation begins using the following range according to the current airflow direction.

Airflow direction is 1–4 (for cooling, dry).

With the upper airflow-direction louver in the horizontal position, the lower airflow-direction louver moves (swings) to direct airflow to a wide area.

- Left/right swing: The airflow-direction louvers move (swing) in the left/right airflow direction.

- Up/down/left/right swing: The airflow-direction louvers move (swing) in both the up/down and left/right airflow directions.
- The SWING operation may stop temporarily when the air conditioner's fan is not operating, or when operating at very low speeds.
- If the SET button (Vertical) is pressed during the up/down swing operation, the up/down swing operation will stop and if the SET button (Horizontal) is pressed during the left/right swing operation, the left/right swing operation will stop.

ECONOMY OPERATION


Begin Air Conditioner operation before performing this procedure.

To Use the ECONOMY Operation

Press the ECONOMY button (Fig.5 ⑯).

The ECONOMY Indicator Lamp (green) (Fig. 3 ⑦) will light.

ECONOMY operation begins.

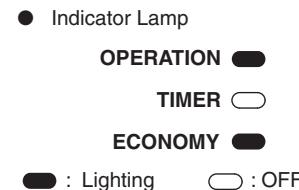

To Stop the ECONOMY Operation

Press the ECONOMY button (Fig.5 ⑯) again.

The ECONOMY Indicator Lamp (green) (Fig. 3 ⑦) will go out.

Normal operation begins.

About ECONOMY Operation

- When ECONOMY operation mode is operated, the room temperature will be little higher than the set-temp under cooling mode. Therefore, the ECONOMY mode is able to save more energy than other normal mode.
- In case of single-type, at the maximum output, ECONOMY Operation is approximately 70% of normal air conditioner operation.
- If the room is not cooled well during ECONOMY operation, select normal operation.
- During the monitor period in the AUTO mode, the air conditioner operation will not change to ECONOMY operation even if ECONOMY operation is selected by pressing the ECONOMY operation button.

MANUAL AUTO OPERATION

Use the MANUAL AUTO operation in the event the Remote Controller is lost or otherwise unavailable.

How To Use the Main Unit Controls

Press the MANUAL AUTO button (Fig. 2 ②) more than 3 seconds and less than 10 seconds on the main unit control panel.

To stop operation, press the MANUAL AUTO button (Fig. 2 ②) once again.

(Controls are located inside the intake grille.)

- When the air conditioner is operated with the controls on the MANUAL AUTO button, it will operate under the same mode as the AUTO mode selected on the Remote Controller (see Page 7).
- The fan speed selected will be "AUTO" and the thermostat setting will be standard. (24 °C)

CLEANING AND CARE


⚠ CAUTION

- Before cleaning the air conditioner, be sure to turn it off and disconnect the Power Supply Cord.
- Be sure the Intake Grille (Fig. 1 ⑧) is installed securely.
- When removing and replacing the air filters, be sure not to touch the heat exchanger, as personal injury may result.

Cleaning the Intake Grille

1. Remove the Intake Grille.

- ① Place your fingers at both lower ends of the grille panel, and lift forward; if the grille seems to catch partway through its movement, continue lifting upward to remove.
- ② Pull past the intermediate catch and open the Intake Grille wide so that it become horizontal.

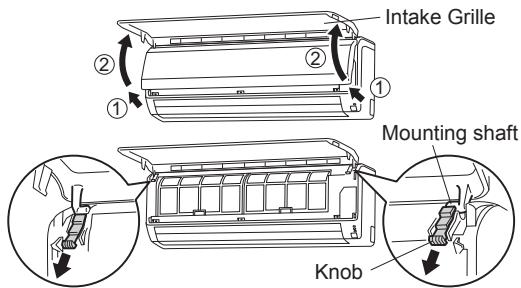


2. Clean with water.

Remove dust with a vacuum cleaner; wipe the unit with warm water, then dry with a clean, soft cloth.

3. Replace the Intake Grille.

- ① Pull the knobs all the way.
- ② Hold the grille horizontal and set the left and right mounting shafts into the bearings at the top of the panel.
- ③ Press the place where the arrow on the diagram indicates and close the Intake Grille.

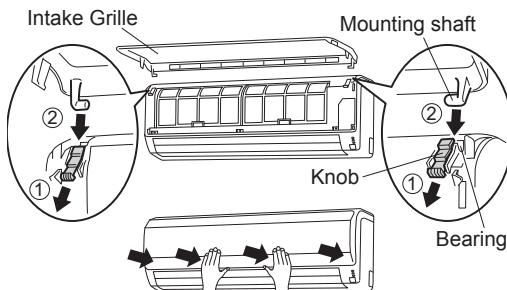


Cleaning the Air Filter

1. Open the Intake Grille, and remove the air filter.

Lift up the air filter's handle, disconnect the 2 lower tabs, and pull out.

Air filter handle

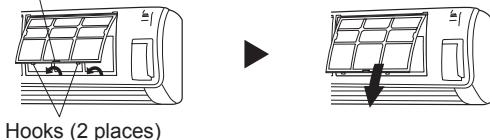

2. Remove dust with a vacuum cleaner or by washing.

After washing, allow to dry thoroughly in a shaded place.

3. Replace the Air Filter and close the Intake Grille.

- ① Align the sides of the air filter with the panel, and push in fully, making sure the 2 lower tabs are returned properly to their holes in the panel.



- ② Close the Intake Grille.

(For purposes of example, the illustration shows the unit without Intake Grille installed.)

- Dust can be cleaned from the air filter either with a vacuum cleaner, or by washing the filter in a solution of mild detergent and warm water. If you wash the filter, be sure to allow it to dry thoroughly in a shady place before reinstalling.
- If dirt is allowed to accumulate on the air filter, airflow will be reduced, lowering operating efficiency and increasing noise.
- During periods of normal use, the Air Filters should be cleaned every 2 weeks.
- Don't operate the air conditioner with being opened the intake grille.

- When used for extended periods, the unit may accumulate dirt inside, reducing its performance. We recommend that the unit be inspected regularly, in addition to your own cleaning and care. For more information, consult authorized service personnel.
- When cleaning the unit's body, do not use water hotter than 40 °C, harsh abrasive cleansers, or volatile agents like benzene or thinner.
- Do not expose the unit body to liquid insecticides or hairsprays.
- When shutting down the unit for 1 month or more, first allow the fan mode to operate continuously for half a day to allow internal parts to dry thoroughly.

CLEANING AND CARE


Air Cleaning Filter Installation

1. Open the Intake Grille and remove the Air filters.




2. Install the Air cleaning filter set (set of 2).

① Set the air cleaning filter into the air cleaning filter frame.

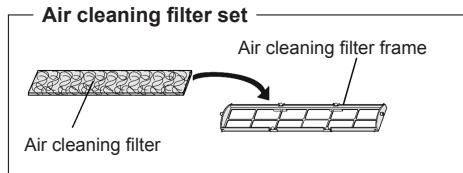


② Engage the latch at both ends of the filter with the 2 hooks at the rear of the air cleaning filter frame.

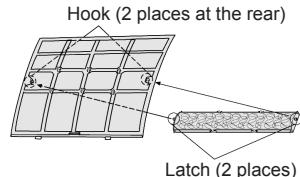


Take care that the air cleaning filter does not project beyond the frame.

③ Engage the 6 fixing locations at the top and bottom of the air cleaning filter frame with the hooks of the air filter.

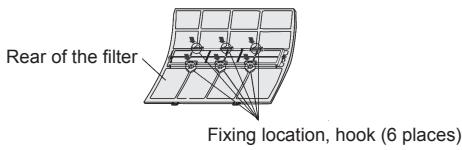

 3. Install the 2 Air filters and close the Intake Grille.



● When air cleaning filters are used, the effect will increased by setting the fan speed to "HIGH".

Replacing dirty Air cleaning filters

Replace filters with the following components (purchased separately).

● POLYPHENOL CATECHIN AIR CLEANING FILTER: UTR-FA13-1

● Negative air ions deodorizing filter: UTR-FA13-2

 
1. Open the Intake Grille and remove the Air filters.



2. Replace them by 2 new Air cleaning filters.

- ① Remove the old air cleaning filters in reverse order of their installation.
- ② Install in the same way as for installation of the air cleaning filter set.

3. Install the 2 Air filters and close the Intake Grille.



In regard to the Air Cleaning Filters

POLYPHENOL CATECHIN AIR CLEANING FILTER (1 sheet)

- The Air Cleaning Filters are disposable filters. (They can not be washed and reused.)
- For storage of the Air Cleaning Filters, use the filters as soon as possible after the package has been opened. (The air cleaning effect decreases when the filters are left in the opened package.)
- Generally, the filters should be exchanged about every 3 months.

Please buy dedicated air cleaning filters (UTR-FA13-1) (Sold separately) to exchange the used dirty air cleaning filters.

[Negative air ions deodorizing filter (1 sheet) — light blue]

- The filters should be exchanged about every 3 years so as to maintain the deodorizing effect.
- Filter frame is not a one-off product.

Please buy dedicated deodorizing filter (UTR-FA13-2) (Sold separately) when exchanging the filters.

Maintenance of Deodorizing Filters


In order to maintain the deodorizing effect, please clean the filter in the follow way once 3 months.

- ① Remove the deodorizing filter.
- ② Clean with water and dry in the air.
- 1) Flush the filters with high-pressure hot water until the surface of the filters are covered with water. Please flush with diluent neutral detergent.
Never wash by reaming or rubbing, otherwise it will damage the deodorizing effect.
- 2) Rinse with water flow.
- 3) Dry in shade.
- ③ Reinstall the deodorizing filter.

CLEANING AND CARE

Filter Indicator Reset (The special setting)

- Can be used if set correctly during installation.
Please consult authorized serviceman when using this function.
- It lights on when it is time to clean the air filters.
Clean the filter referring to "CLEANING AND CARE".
After cleaning, press the MANUAL/AUTO button (Fig. 2 ②) for 2 seconds or less on the indoor unit.

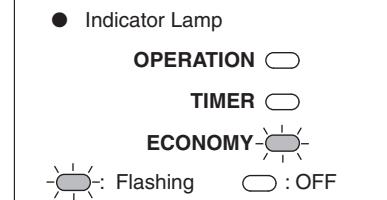

SELECTING THE REMOTE CONTROLLER CUSTOM CODE

When two or more air conditioners are installed in a room and the Remote Controller is operating an air conditioner other than the one you wish to set, change the custom code of the Remote Controller to operate only the air conditioner you wish to set (4 selections possible).

When two or more air conditioners are installed in a room, please contact your retailer to set the individual air conditioner custom codes.

Selecting the Remote Controller Custom Code

Use the following steps to select the custom code of the Remote Controller. (Note that the air conditioner cannot receive a custom code if the air conditioner has not been set for the custom code.)

- 1 Press the START/STOP button until only the clock is displayed on the Remote Controller display.
- 2 Press the MODE button for at least five seconds to display the current custom code (initially set to **A**).
- 3 Press the (**▲** / **▼**) buttons to change the custom code between **A** → **B** → **C** → **D**. Match the code on the display to the air conditioner custom code.
- 4 Press the MODE button again to return to the clock display. The custom code will be changed.



- If no buttons are pressed within 30 seconds after the custom code is displayed, the system returns to the original clock display. In this case, start again from step 1.
- The air conditioner custom code is set to A prior to shipment. Contact your retailer to change the custom code.
- The Remote Controller resets to custom code A when the batteries in the Remote Controller are replaced. If you use a custom code other than custom code A, reset the custom code after replacing the batteries.

If you do not know the air conditioner custom code setting, try each of the custom codes (**A** → **B** → **C** → **D**) until you find the code which operates the air conditioner.

TROUBLESHOOTING

⚠️ WARNING

In the event of a malfunction (burning smell, etc.), immediately stop operation, disconnect the power supply plug or turn off the circuit breaker, and consult authorized service personnel.

Merely turning off the unit's power switch will not completely disconnect the unit from the power source. Always be sure to disconnect the power supply plug or turn off your circuit breaker to ensure that power is completely off.

Before requesting service, perform the following checks:

	Symptom	Problem	See Page
NORMAL FUNCTION	Doesn't operate immediately:	<ul style="list-style-type: none"> If the indoor unit is stopped and then immediately started again, the compressor will not operate for about 3 minutes, in order to prevent fuse blowouts. Whenever the electrical breaker is turned off then on again the protection circuit will operate for about 3 minutes, preventing unit operation during that period. 	—
	Noise is heard:	<ul style="list-style-type: none"> During operation or immediately after stopping the unit, the sound of water flowing in the air conditioner's piping may be heard. Also, noise may be particularly noticeable for about 2 to 3 minutes after starting operation (sound of refrigerant flowing). During operation, a slight squeaking sound may be heard. This is the result of minute expansion and contraction of the front panel due to temperature changes. 	—
	Smells:	<ul style="list-style-type: none"> Some smell may be emitted from the indoor unit. This smell is the result of room smells (furniture, tobacco, etc.) which have been taken into the indoor unit. 	—
	Mist or steam is emitted:	<ul style="list-style-type: none"> During Cooling or Dry operation, a thin mist may be seen emitted from the indoor unit. This results from the sudden Cooling of room air by the cool air emitted from the indoor unit, resulting in condensation and misting. 	—
	Airflow is weak or stops:	<ul style="list-style-type: none"> During Dry mode, the indoor unit will operate at low speed; in order to adjust room humidity, the indoor unit's fan may stop from time to time. Also, the fan may operate at very low speed when adjusting room humidity. During SUPER QUIET operation, the fan will operate at very low speed. In the monitor of AUTO operation, the fan will operate at very low speed. 	7 6 7
CHECK ONCE MORE	Doesn't operate at all:	<ul style="list-style-type: none"> Has the circuit breaker been turn off? Has there been a power failure? Has a fuse blown out, or a circuit breaker been tripped? 	—
	Poor Cooling performance:	<ul style="list-style-type: none"> Is the Air Filter dirty? Are the air conditioner's intake grille or outlet port blocked? Did you adjust the room temperature settings (thermostat) correctly? Is there a window or door open? In the case of Cooling operation, is a window allowing bright sunlight to enter? (Close the curtains.) In the case of Cooling operation, are there heating apparatus and computers inside the room, or are there too many people in the room? 	—
	The unit operates differently from the Remote Controller's setting:	<ul style="list-style-type: none"> Is the unit set for SUPER QUIET operation? 	6
		<ul style="list-style-type: none"> Are the Remote Controller's batteries dead? Are the Remote Controller's batteries loaded properly? 	5

If the problem persists after performing these checks, or if you notice burning smells, or the OPERATION Indicator Lamp (Fig. 3 ⑤) and the TIMER Indicator Lamp (Fig. 3 ⑥) flashes and ECONOMY Indicator Lamp (Fig.3 ⑦) flashes fast, immediately stop operation, turn off the electrical breaker and consult authorized service personnel.

OPERATING TIPS

AUTO Restart

In Event of Power Interruption

- The power supply to the air conditioner is stopped by a power interruption. The air conditioner will then restart automatically in its previous mode when the power is restored.
- If a power interruption occurs during TIMER operation, the timer will be reset and the indoor unit will begin (or stop) operation at the new time setting. In the event that this kind of timer fault occurs, the TIMER Indicator Lamp will flash (see Page. 3).
- Use of other electrical appliances (electric shaver, etc.) or nearby use of a wireless radio transmitter may cause the air conditioner to malfunction. In this event, temporarily turn off the circuit breaker, turn it on and then use the Remote Controller to resume operation.

 **GENERAL**
FUJITSU GENERAL LIMITED
3-3-17, Suenaga, Takatsu-ku, Kawasaki 213-8502, Japan