

15. CUSTOMER GUIDANCE

Explain the following to the customer in accordance with the operating manual:

- (1) Starting and stopping method, operation switching, temperature adjustment, timer, airflow switching, and other remote control unit operations.
- (2) Air filter removal and cleaning, and how to use the air louvers.
- (3) Give the operating manual to the customer.

16. ERROR CODES

The lamp on the photo detector unit will output error codes by way of blinking patterns. See the lamp blinking patterns in the table. An error display is displayed only during operation.

 

Error display			Description
OPERATION lamp (green)	TIMER lamp (orange)	ECONOMY lamp (green)	
●(1)	●(1)	◇	Serial communication error
●(3)	●(2)	◇	Indoor unit PCB model information error
●(3)	●(5)	◇	Manual auto switch error
●(4)	●(1)	◇	Room temp. sensor error
●(4)	●(2)	◇	Indoor unit Heat Ex. Middle temp. sensor error
●(5)	●(1)	◇	Indoor unit fan motor error
●(6)	●(2)	◇	Outdoor unit main PCB model information error or communication error
●(6)	●(5)	◇	Trip terminal L error
●(7)	●(1)	◇	Discharge temp. sensor error
●(7)	●(3)	◇	Outdoor unit Heat Ex. liquid temp. sensor error
●(7)	●(4)	◇	Outdoor temp. sensor error
●(8)	●(4)	◇	Current sensor error
●(9)	●(4)	◇	Trip detection
●(9)	●(5)	◇	Compressor rotor position detection error
●(9)	●(7)	◇	Outdoor unit fan motor error
●(9)	●(9)	◇	4-way valve error
●(10)	●(1)	◇	Discharge temp. error

Display mode ● : 0.5s ON / 0.5s OFF

◇ : 0.1s ON / 0.1s OFF

() : Number of flashing

[Troubleshooting with the indoor unit display]

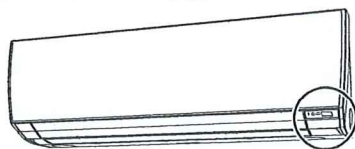

OPERATION indicator (green) —┐

TIMER indicator (orange) —┐

ECONOMY indicator (green) —┐

15. 用戶導引

根據使用說明書告知用戶以下內容：

- (1) 啟動和停止方法、操作開關、溫度調節、定時、風量開關和其他遙控器操作。
- (2) 拆卸和清潔空氣過濾網，以及如何使用氣流方向導向板。
- (3) 向用戶提供使用說明書。

16. 錯誤代碼

光探測器上的指示燈會以閃爍圖案的方式輸出錯誤代碼。請參閱表中的指示燈閃爍圖案。錯誤畫面僅會在操作期間顯示。

錯誤畫面			說明
運轉指示燈 (綠色)	定時指示燈 (橙色)	省電指示燈 (綠色)	
●(1)	●(1)	◇	連續通訊錯誤
●(3)	●(2)	◇	室內機組 PCB 型號資訊錯誤
●(3)	●(5)	◇	強制自動開關錯誤
●(4)	●(1)	◇	室溫感測器錯誤
●(4)	●(2)	◇	室內機組熱交換器、中段溫度感測器錯誤
●(5)	●(1)	◇	室內機組風扇馬達錯誤
●(6)	●(2)	◇	室外機組主 PCB 型號資訊錯誤或通訊錯誤
●(6)	●(5)	◇	跳脫端子 L 錯誤
●(7)	●(1)	◇	排氣溫度感測器錯誤
●(7)	●(3)	◇	室外機組熱交換器液溫感測器錯誤
●(7)	●(4)	◇	室外溫度感測器錯誤
●(8)	●(4)	◇	電流感測器錯誤
●(9)	●(4)	◇	跳脫偵測
●(9)	●(5)	◇	壓縮機轉子位置偵測錯誤
●(9)	●(7)	◇	室外機組風扇馬達錯誤
●(9)	●(9)	◇	四通閥錯誤
●(10)	●(1)	◇	排氣溫度錯誤

顯示模式 ●：亮起 0.5 秒 / 熄滅 0.5 秒

◇：亮起 0.1 秒 / 熄滅 0.1 秒

()：閃爍次數

[室內機組顯示的故障排除]



運轉指示燈 (綠色)

定時指示燈 (橙色)

省電指示燈 (綠色)