


AIR CONDITIONER

English

INSTALLATION MANUAL

INDOOR UNIT (Duct Type)

For authorized service personnel only.

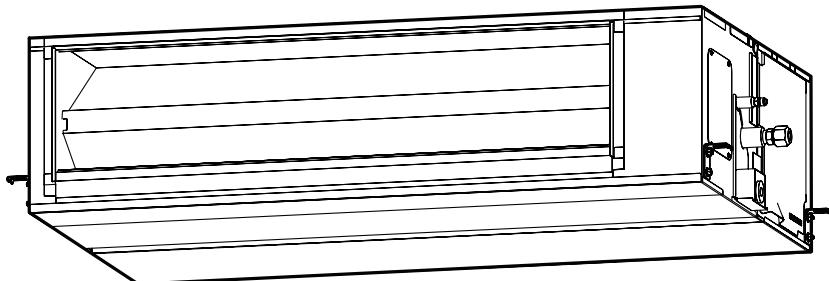

MADE IN THAILAND



PART No. 9381386031-02

INSTALLATION MANUAL

PART No. 9381386031-02

Indoor Unit (Duct Type)

Contents

1. SAFETY PRECAUTIONS	1
2. ABOUT THIS PRODUCT	1
2.1. Precautions for using R410A refrigerant	1
2.2. Special tools for R410A refrigerant	1
2.3. Accessories	2
2.4. Optional parts	2
3. GENERAL SPECIFICATION	2
3.1. Selecting the pipe material	2
3.2. Pipe requirement	2
3.3. Electrical requirement	2
4. INSTALLATION WORK	3
4.1. Selecting an installation location	3
4.2. Installation dimension	3
4.3. Installing the unit	4
4.4. Installing the drain hose	4
4.5. Fresh air intake	5
5. PIPE INSTALLATION	6
5.1. Flare connection (pipe connection)	6
5.2. Installing heat insulation	6
6. ELECTRICAL WIRING	7
6.1. Wiring method	7
7. REMOTE CONTROLLER SETTING	8
7.1. Installing the remote controller	8
7.2. Setting the DIP switches	9
8. FUNCTION SETTING	9
8.1. Turning on the power	9
8.2. Setting method	9
8.3. Function setting	9
8.4. DIP switch setting	10
8.5. Setting the room temperature detection location	10
9. SPECIAL INSTALLATION METHODS	11
9.1. Group control system	11
9.2. Fan delay setting	11
10. OPTIONAL PARTS	11
10.1. External input and external output	11
10.2. Remote sensor (Optional parts)	11
11. CHECK LIST	11
12. TEST RUN	11
13. CUSTOMER GUIDANCE	11
14. ERROR CODES	12

Note: This manual describes how to install the air conditioner described above. Handling and installation shall only be done by professionals as outlined in this manual.

1. SAFETY PRECAUTIONS

- Be sure to read this manual thoroughly before installation.
- The warnings and precautions indicated in this Manual contain important information pertaining to your safety. Be sure to observe them.
- Hand this Manual, together with the operating manual, to the customer. Request the customer to keep them on hand for future use, such as for relocating or repairing the unit.

WARNING

Indicates a potentially or imminently hazardous situation which, if not avoided, could result in death or serious injury.

Installation of this product must be done by experienced service technicians or professional installers only in accordance with this manual. Installation by nonprofessional or improper installation of the product may cause serious accidents such as injury, water leakage, electric shock, or fire. If the product is installed in disregard of the instructions in this manual, it will void the manufacturer's warranty.

Do not turn on the power until all work has been completed. Turning on the power before the work is completed can cause serious accidents such as electric shock or fire.

If refrigerant leaks when you are working, ventilate the area. If the leaking refrigerant is exposed to a direct flame it may produce a toxic gas.

Do not use this equipment with air or any other unspecified refrigerant in the refrigerant lines. Excess pressure can cause a rupture.

Installation must be performed in accordance with regulations, codes, or standards for electrical wiring and equipment in each country, region, or the installation place.

Do not touch the fins of the heat exchanger. Touching the heat exchanger fins could result in damage to the fins or personal injury such as skin rupture.

CAUTION	Indicates a potentially hazardous situation that may result in minor or moderate injury or damage to property.
Read carefully all safety information written in this manual before you install or use the air conditioner.	
Install the product by following local codes and regulations in force at the place of installation, and the instructions provided by the manufacturer.	
This product is part of a set constituting an air conditioner. The product must not be installed alone or be installed with non-authorized device by the manufacturer.	
Always use a separate power supply line protected by a circuit breaker operating on all wires with a distance between contact of 3 mm for this product.	
To protect the persons, earth (ground) the product correctly, and use the power cable combined with an Earth Leakage Circuit Breaker (ELCB).	
The product is not explosion proof, and therefore should not be installed in explosive atmosphere.	
To avoid getting an electric shock, never touch the electrical components soon after the power supply has been turned off. After turning off the power, always wait 5 minutes or more before you touch the electrical components.	
This product contains no user-serviceable parts. Always consult experienced service technicians for repairing.	
When moving or relocating the air conditioner, consult experienced service technicians for disconnection and reinstallation of the product.	
Do not place any other electrical products or household belongings under the product. Condensation dripping from the product might get them wet, and may cause damage or malfunction of the property.	
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.	

2. ABOUT THIS PRODUCT**2.1. Precautions for using R410A refrigerant****WARNING**

Do not introduce any substance other than the prescribed refrigerant into the refrigeration cycle. If air enters the refrigeration cycle, the pressure in the refrigeration cycle will become abnormally high and cause the piping to rupture.

If there is a refrigerant leak, make sure that it does not exceed the concentration limit. If a refrigerant leak exceeds the concentration limit, it can lead to accidents such as oxygen starvation.

Do not touch refrigerant that has leaked from the refrigerant pipe connections or other area. Touching the refrigerant directly can cause frostbite.

If a refrigerant leak occurs during operation, immediately vacate the premises and thoroughly ventilate the area. If the refrigerant comes in contact with a flame, it produces a toxic gas.

2.2. Special tools for R410A refrigerant**WARNING**

To install a unit that uses R410A refrigerant, use dedicated tools and piping materials that have been manufactured specifically for R410A use. Because the pressure of R410A refrigerant is approximately 1.6 times higher than the R22, failure to use dedicated piping material or improper installation can cause rupture or injury. Furthermore, it can cause serious accidents such as water leakage, electric shock, or fire.

Tool name	Changes
Gauge manifold	The pressure in the refrigerant system is extremely high and cannot be measured with a conventional gauge. To prevent erroneous mixing of other refrigerants, the diameter of each port has been changed. It is recommended to use a gauge manifold with a high pressure display range of -0.1 to 5.3 MPa and a low pressure display range of -0.1 to 3.8 MPa.
Charging hose	To increase pressure resistance, the hose material and base size were changed. (The charging port thread diameter for R410A is 1/2-20 UNF.)
Vacuum pump	A conventional vacuum pump can be used by installing a vacuum pump adapter. Be sure that the pump oil does not backflow into the system. Use one capable for vacuum suction of -100.7 kPa (5 Torr, -755 mmHg).
Gas leakage detector	Special gas leakage detector for R410A refrigerant.

2.3. Accessories

⚠ WARNING

For installation purposes, be sure to use the parts supplied by the manufacturer or other prescribed parts. The use of non-prescribed parts can cause serious accidents such as the unit falling, water leakage, electric shock, or fire.

- The following installation parts are furnished. Use them as required.
- Keep the Installation Manual in a safe place and do not discard any other accessories until the installation work has been completed.

Name and Shape	Q'ty	Description
Operating Manual	1	
Installation Manual	2	
Specification Manual	1	
Special nut A (large flange)	4	For suspending the indoor unit from ceiling
Special nut B (small flange)	4	
Washer	8	
Coupler heat insulation (large)	1	For indoor side pipe joint (gas pipe)
Coupler heat insulation (small)	1	For indoor side pipe joint (liquid pipe)
Cable tie (large)	4	For fixing the heat insulation
Cable tie (medium)	1	For fixing the remote controller cable
Cable tie (small)	1	For fixing the remote controller cable
Remote controller (WAE type)	1	For air conditioner operation
Tapping screw (flush heads)	2	For installing the remote controller
Remote controller cable	1	For connecting the remote controller
Drain hose insulation	1	Insulates the drain hose and vinyl hose
Drain hose	1	For installing drain pipe VP25 (O.D.32, I.D.25)
Hose Band	1	For installing drain hose

2.4. Optional parts

Parts name	Model No.	Summary
Remote sensor	UTY-XSZX	New amenity space can be offered by installing the Remote sensor
External control set	UTD-ECS5A	Use to connect various peripheral devices and air conditioner PC board

3. GENERAL SPECIFICATION

3.1. Selecting the pipe material

⚠ CAUTION

Do not use existing pipes.

Use pipes that have clean external and internal sides without any contamination which may cause trouble during use, such as sulfur, oxide, dust, cutting waste, oil, or water.

It is necessary to use seamless copper pipes.

Material : Phosphor deoxidized seamless copper pipes

It is desirable that the amount of residual oil is less than 40 mg/10 m.

Do not use copper pipes that have a collapsed, deformed, or discolored portion (especially on the interior surface). Otherwise, the expansion valve or capillary tube may become blocked with contaminants.

Improper pipe selection will degrade performance. As an air conditioner using R410A incurs pressure higher than when using conventional refrigerant, it is necessary to choose adequate materials.

- Thicknesses of copper pipes used with R410A are as shown in the table.
- Never use copper pipes thinner than those indicated in the table even if they are available on the market.

Pipe outside diameter [mm (in.)]	Thickness [mm]
6.35 (1/4)	0.8
9.52 (3/8)	0.8
12.70 (1/2)	0.8
15.88 (5/8)	1.0
19.05 (3/4)	1.2

3.2. Pipe requirement

⚠ CAUTION

Refer to the Installation Manual of the outdoor unit for description of the length of connecting pipe or for difference of its elevation.

Diameter [mm (in.)]	Liquid	9.52 (3/8)
	Gas	19.05 (3/4)

- Use pipe with water-resistant heat insulation.

⚠ CAUTION

Install heat insulation around both the gas and liquid pipes. Failure to do so may cause water leaks.

Use heat insulation with heat resistance above 120 °C. (Reverse cycle model only)

In addition, if the humidity level at the installation location of the refrigerant piping is expected to exceed 70 %, install heat insulation around the refrigerant piping. If the expected humidity level is 70-80 %, use heat insulation that is 15 mm or thicker and if the expected humidity exceeds 80 %, use heat insulation that is 20 mm or thicker. If heat insulation is used that is not as thick as specified, condensation may form on the surface of the insulation.

In addition, use heat insulation with heat conductivity of 0.045 W/(m·K) or less (at 20 °C).

3.3. Electrical requirement

Cable	Cable size (mm ²)	Type	Remarks
Connection cable	1.5 (MIN.)	Type 60245 IEC57	3Cable+Earth (Ground), 220V - 240V

Max. Cable Length: Limit voltage drop to less than 2%. Increase cable gauge if voltage drop is 2% or more.

- Perform all electrical work according to the standard.
- Install circuit breakers, which have the terminal spacing of more than 3 mm, in a place of near the indoor unit and outdoor unit.

⚠ CAUTION

Be sure to execute the electrical work according to the Laws of each country and the Installation Instructions. In addition, be sure to set as exclusive line and use the rated voltage and circuit breaker.

4. INSTALLATION WORK

⚠ WARNING

Do not turn on the power until all installation work is complete.

Carrying and installation of the unit should be performed by a sufficient number of people and with sufficient equipment that is adequate for the weight of the unit. Performing such work with an insufficient number of people or with inadequate equipment could result in dropping of the unit or personal injury.

⚠ CAUTION

For installation details, refer to the technical data.

4.1. Selecting an installation location

Decide the mounting position together with the customer as follows.

⚠ WARNING

Select installation locations that can properly support the weight of the indoor unit and which will not amplify sound or vibration. If the installation location is not strong enough, the indoor unit may fall and cause injuries.

Install the units securely so that they do not topple or fall.

⚠ CAUTION

Do not install the indoor unit in the following areas:

- Area with high salt content, such as at the seaside. It will deteriorate metal parts, causing the parts to fall or the unit to leak water.
- Area filled with mineral oil or containing a large amount of splashed oil or steam, such as a kitchen. It will deteriorate plastic parts, causing the parts to fall or the unit to leak water.
- Area that generates substances that adversely affect the equipment, such as sulfuric gas, chlorine gas, acid, or alkali. It will cause the copper pipes and brazed joints to corrode, which can cause refrigerant leakage.
- Area that can cause combustible gas to leak, contains suspended carbon fibers or flammable dust, or volatile inflammables such as paint thinner or gasoline. If gas leaks and settles around the unit, it can cause a fire.
- Area where animals may urinate on the unit or ammonia may be generated.

Do not use the unit for special purposes, such as storing food, raising animals, growing plants, or preserving precision devices or art objects. It can degrade the quality of the preserved or stored objects.

Do not install where there is the danger of combustible gas leakage.

Do not install the unit near a source of heat, steam, or flammable gas.

Install the unit where drainage does not cause any trouble.

Install the indoor unit, outdoor unit, power supply cable, transmission cable, and remote control cable at least 1 m away from a television or radio receivers. The purpose of this is to prevent TV reception interference or radio noise.

(Even if they are installed more than 1 m apart, you could still receive noise under some signal conditions.)

Install the unit where ambient temperature does not reach 60°C or more.

Take a measure such as ventilation for an environment in which heat is retained.

If children under 10 years old may approach the unit, take preventive measures so that they cannot reach the unit.


- (1) Install the indoor unit in a place which can withstand a load of at least 5 times the weight of the unit.
- (2) The inlet and outlet ports should not be obstructed; the air should be able to blow all over the room.
- (3) Leave the space required to service the air conditioner.
- (4) Install the unit where connection to the outdoor unit is easy.
- (5) Install the unit where the connection pipe can be easily installed.
- (6) Install the unit where the drain hose can be easily installed.
- (7) Install the unit where noise and vibrations are not amplified.
- (8) Take servicing, etc., into consideration and leave the spaces. Also install the unit where the filter can be removed.
- (9) Do not install the unit where it will be exposed to direct sunlight.

Correct initial installation location is important because it is difficult to move unit after it is installed.


4.2. Installation dimension

4.2.1. Installation by which service space is made on top of the unit (recommended)

If maintenance work is to be done from the top, keep the space of the more than 450 mm between the indoor unit and ceiling.


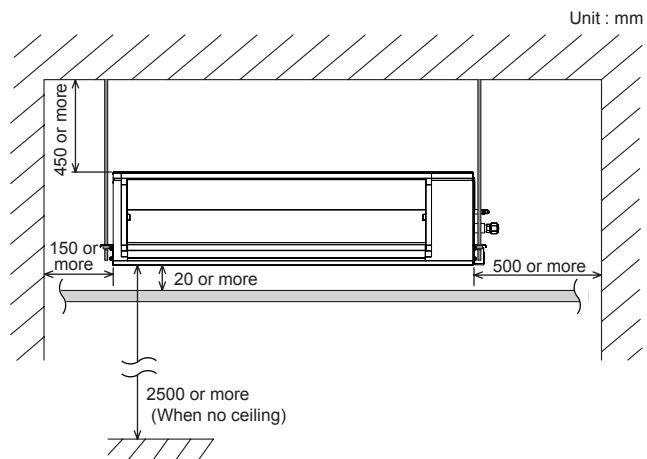


4.2.2. Installation by which service is carried out from the bottom of the unit

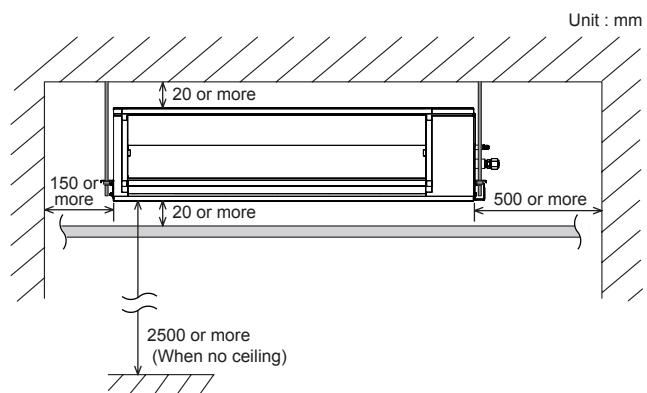

4.2.3. For maintenance

- (1) Maintenance work of the control box is possible with the Service access of the measurement shown in the figure.
- (2) If maintenance work is to be done from the bottom side, the Service access needs to be larger than the outside dimension of the fan unit.

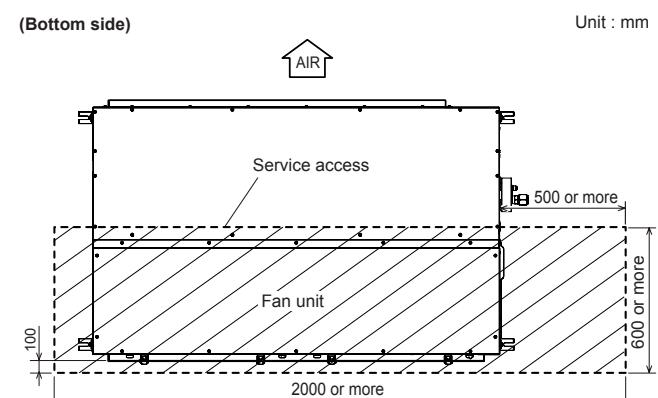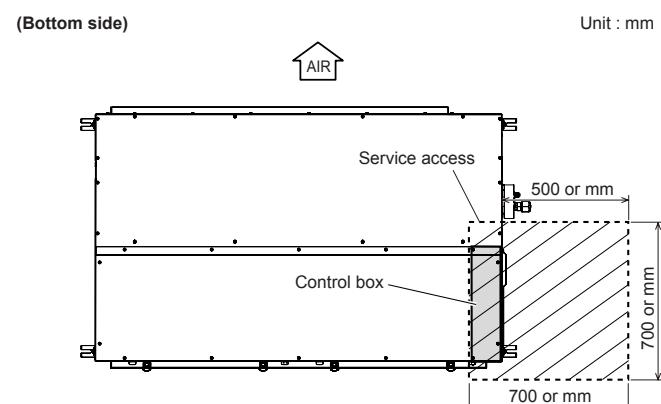

4.3. Installing the unit

WARNING

Carrying and installation of the unit should be performed by a sufficient number of people and with sufficient equipment that is adequate for the weight of the unit. Performing such work with an insufficient number of people or with inadequate equipment could result in dropping of the unit or personal injury.

If the job is done with the panel frame only, there is a risk that the unit will come loose. Please take care.

When fastening the hangers, make the bolt positions uniform.

CAUTION

Confirm the directions of the air intake and outlet before installing the unit.

4.3.1. Unpacking

- Leave the packing materials on until the unit is at the installation site.
- Remove the packing hardware and dispose of it.
- Be careful not to dispose the accessories.

Unit is packed upside down.

4.3.2. Separating the unit for installation

You can separate the heat exchanger unit and fan unit for installation.

Refer to the "Separation Method" label attached to the indoor unit for details.


CAUTION

Do not install the paired units (heat exchanger unit and fan unit) in separate locations. It may cause malfunction of the product or water leakage.


4.3.3. Hanging bolt installation diagram

Suspend the indoor unit by referring to the following figures.

(Top side)

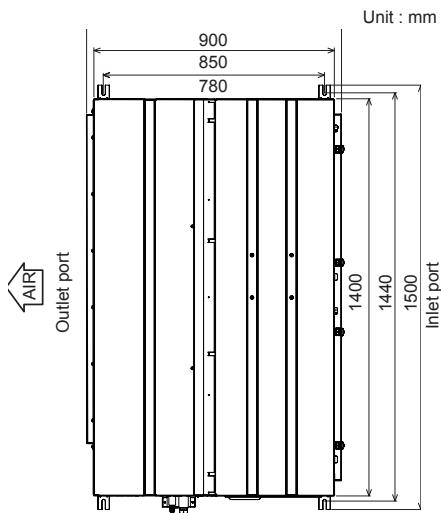

(Right side)

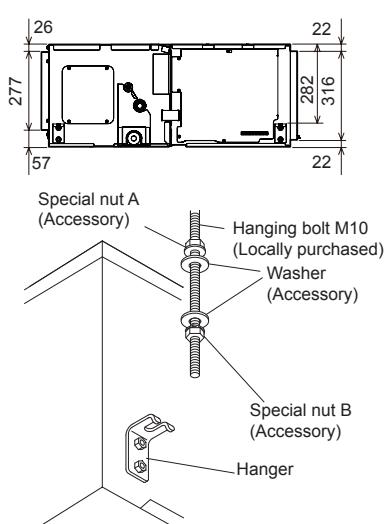

Bolt Strength	9.81 to 14.71 N·m (100 to 150 kgf·cm)
---------------	---------------------------------------


CAUTION

Fasten the unit securely with special nuts A and B so that the unit does not fall.


4.3.4. Leveling

Base vertical direction leveling on the unit (right and left).

(Right side)

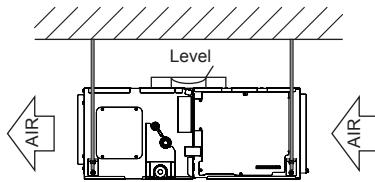

Base horizontal direction leveling on top of the unit.

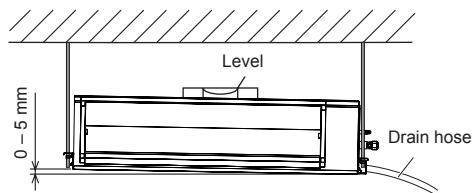

Give a slight tilt to the side to which the drain hose is connected. The tilt should be in the range of 0 mm to 5 mm.

4.4. Installing the drain hose

CAUTION

Install the drain hose in accordance with the instructions in this installation manual and keep the area warm enough to prevent condensation. Problems with the piping may lead to water leaks.

Be sure to properly insulate the drain hose so that the water will not drip from the connected parts.


The position of the installed drain hose should have a downward gradient of 1/100 or more.

Do not connect the drain hose in which ammonia or other types of gas affecting the unit is generated. Heat exchange erosion may occur.

Install the drain hose according to the measurements given in the following figure.



(Right side)


Unit : mm

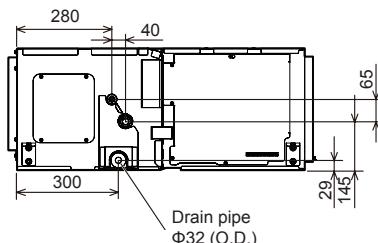

How to install the drain hose


- Install the drain hose (accessory) to the drain port of the indoor unit. Attach the hose band around the hose within the dimension shown. Secure firmly with the hose band.
- Attach the drain pipe (locally procured). Use general hard polyvinyl chloride pipe (VP25) [outside diameter 38 mm] and connect it with adhesive (polyvinyl chloride) so that there is no leakage.
- Check the drainage.
- Wrap the drain hose insulation around the drain hose connection.

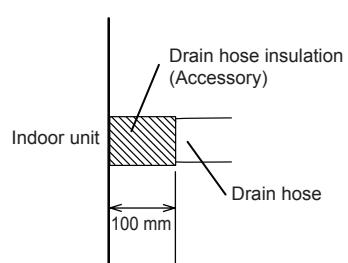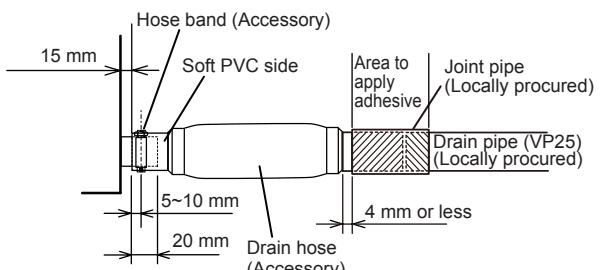

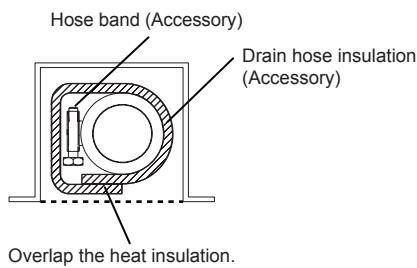


NOTE:


- Install the drain pipe with downward gradient (1/50 to 1/100) and so there are no rises or traps in the pipe.

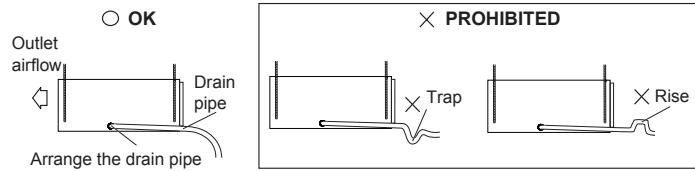

- When the pipe is long, install supporters.

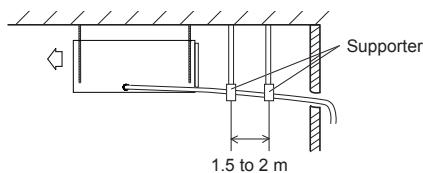

- Do not perform air bleeding.



CAUTION


Make sure the drain water is properly drained.

To prevent people from touching the parts inside the unit, be sure to install grilles on the inlet and outlet ports. The grilles must be designed in such a way that cannot be removed without tools.

Set the external static pressure between 60 Pa and 160 Pa and set the appropriate static pressure mode. (Refer to "8.3. Function setting")

If an intake duct is installed, take care not to damage the temperature sensor (the temperature sensor is attached to the intake port flange).

Be sure to install the air inlet grille and air outlet grille for air circulation. The correct temperature cannot be detected.

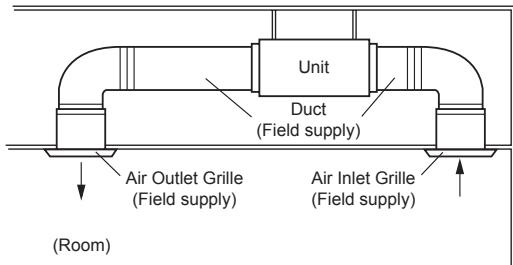


When connecting the duct, perform duct-insulation appropriate for the installing environment.

Inappropriate insulation work may cause condensation on the surface of the insulating material, and may lead to condensation dripping.

4.5. Fresh air intake

(Processing before use)

- When taking in fresh air, cut out the slit of the cabinet on the left side of the outer case with nippers.

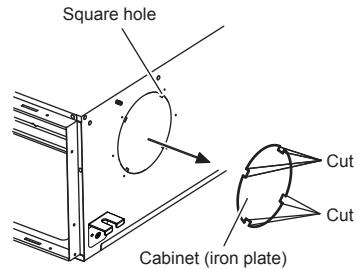


CAUTION

When removing the cabinet (iron plate), be careful not to damage the indoor unit internal parts and surrounding area (outer case).


When processing the cabinet (iron plate), be careful not to injure yourself with burrs, etc.

- Install the round flange to the fresh air intake.

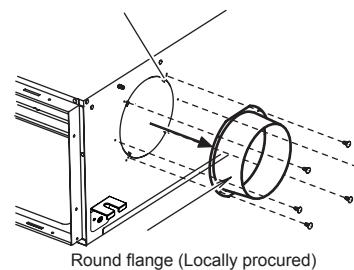

- Connect the duct to the round flange.

- Seal with a band and vinyl tape, etc. so that air does not leak from the connection.

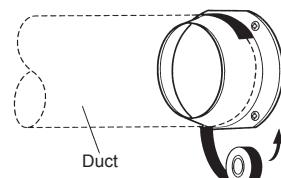

5. PIPE INSTALLATION

⚠ WARNING

During installation, make sure that the refrigerant pipe is attached firmly before you run the compressor. Do not operate the compressor under the condition of refrigerant piping not attached properly with 2-way or 3-way valve open. This may cause abnormal pressure in the refrigeration cycle that leads to breakage and even injury.

During the pump-down operation, make sure that the compressor is turned off before you remove the refrigerant piping.

Do not remove the connection pipe while the compressor is in operation with 2-way or 3-way valve open. This may cause abnormal pressure in the refrigeration cycle that leads to breakage and even injury.

When installing and relocating the air conditioner, do not mix gases other than the specified refrigerant (R410A) to enter the refrigerant cycle.

If air or other gas enters the refrigerant cycle, the pressure inside the cycle will rise to an abnormally high value and cause breakage, injury, etc.

If refrigerant leaks while work is being carried out, ventilate the area. If the refrigerant comes in contact with a flame, it produces a toxic gas.

⚠ CAUTION


Be more careful that foreign matter (oil, water, etc.) does not enter the piping than with refrigerant R410A models. Also, when storing the piping, securely seal the openings by pinching, taping, etc.

While welding the pipes, be sure to blow dry nitrogen gas through them.

5.1. Flare connection (pipe connection)


5.1.1. Flaring

- Use special pipe cutter and flare tool exclusive for R410A.
- (1) Cut the connection pipe to the necessary length with a pipe cutter.
- (2) Hold the pipe downward so that cuttings will not enter the pipe and remove any burrs.
- (3) Insert the flare nut (always use the flare nut attached to the indoor and outdoor units respectively) onto the pipe and perform the flare processing with a flare tool. Use the special R410A flare tool, or the conventional flare tool. Leakage of refrigerant may result if other flare nuts are used.
- (4) Protect the pipes by pinching them or with tape to prevent dust, dirt, or water from entering the pipes.

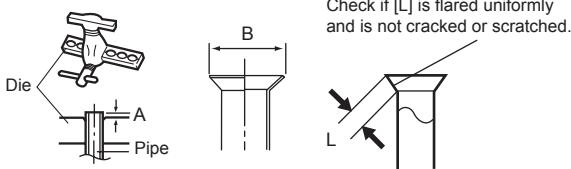

Pipe outside diameter [mm (in.)]	Dimension A [mm]	Dimension B _{0.4} [mm]
6.35 (1/4)		9.1
9.52 (3/8)		13.2
12.70 (1/2)	0 to 0.5	16.6
15.88 (5/8)		19.7
19.05 (3/4)		24.0

When using conventional flare tools to flare R410A pipes, the dimension A should be approximately 0.5 mm more than indicated in the table (for flaring with R410A flare tools) to achieve the specified flaring. Use a thickness gauge to measure the dimension A.



Pipe outside diameter [mm (in.)]	Width across flats of Flare nut [mm]
6.35 (1/4)	17
9.52 (3/8)	22
12.70 (1/2)	26
15.88 (5/8)	29
19.05 (3/4)	36

5.1.2. Bending pipes

- If pipes are shaped by hand, be careful not to collapse them.
- Do not bend the pipes in an angle more than 90°.
- When pipes are repeatedly bent or stretched, the material will harden, making it difficult to bend or stretch them any more.
- Do not bend or stretch the pipes more than 3 times.

⚠ CAUTION

To prevent breaking of the pipe, avoid sharp bends. Bend the pipe with a radius of curvature of 150 mm or over.

If the pipe is bent repeatedly at the same place, it will break.

5.1.3. Connecting pipes

⚠ CAUTION

Be sure to apply the pipe against the port on the indoor unit correctly. If the centering is improper, the flare nut cannot be tightened smoothly. If the flare nut is forced to turn, the threads will be damaged.

Do not remove the flare nut from the indoor unit pipe until immediately before connecting the connection pipe.

Do not use mineral oil on flared part. Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.

(1) Detach the caps and plugs from the pipes.


(2) Centering the pipe against port on the indoor unit, turn the flare nut with your hand.

(3) When the flare nut is tightened properly by your hand, hold the body side coupling with a separate spanner, then tighten with a torque wrench. (See the table below for the flare nut tightening torques.)

⚠ CAUTION

Hold the torque wrench at its grip, keeping it in the right angle with the pipe, in order to tighten the flare nut correctly.

Tighten the flare nuts with a torque wrench using the specified tightening method. Otherwise, the flare nuts could break after a prolonged period, causing refrigerant to leak and generate a hazardous gas if the refrigerant comes into contact with a flame.

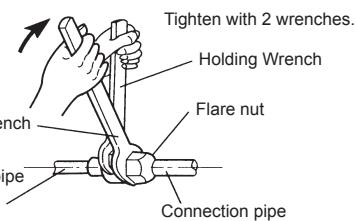


Flare nut [mm (in.)]	Tightening torque [N·m (kgf·cm)]
6.35 (1/4) dia.	16 to 18 (160 to 180)
9.52 (3/8) dia.	32 to 42 (320 to 420)
12.70 (1/2) dia.	49 to 61 (490 to 610)
15.88 (5/8) dia.	63 to 75 (630 to 750)
19.05 (3/4) dia.	90 to 110 (900 to 1,100)

5.2. Installing heat insulation

Install the heat insulation material after performing a refrigerant leak check (see the installation manual for the outdoor unit for details).

5.2.1. Coupler heat insulation

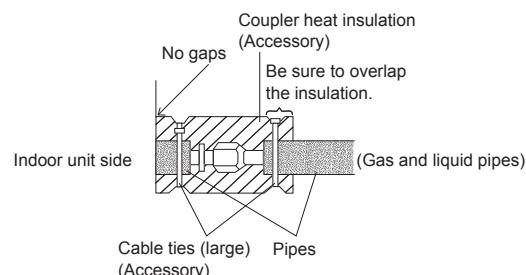

⚠ CAUTION

There should be no gaps between the insulation and the product.

⚠ CAUTION

After connecting the piping, check the all joints for gas leakage with gas leak detector.

When inspecting gas leakage, always use the vacuum pump for pressure. Do not use nitrogen gas.

Install heat insulation around both the large (gas) and small (liquid) pipes. Failure to do so may cause water leaks.

6. ELECTRICAL WIRING

⚠ WARNING

Electrical work must be performed in accordance with this Manual by a person certified under the national or regional regulations. Be sure to use a dedicated circuit for the unit.

An insufficient power supply circuit or improperly performed electrical work can cause serious accidents such as electric shock or fire.

Before starting work, check that power is not being supplied to the indoor unit and outdoor unit.

Use the included connection cables and power cables or ones specified by the manufacturer. Improper connections, insufficient insulation, or exceeding the allowable current can cause electric shock or fire.

For wiring, use the prescribed type of cables, connect them securely, making sure that there are no external forces of the cables applied to the terminal connections. Improperly connected or secured cables can cause serious accidents such as overheating of the terminals, electric shock, or fire.

Do not modify the power cables, use extension cables, or use any branches in the wiring. Improper connections, insufficient insulation, or exceeding the allowable current can cause electric shock or fire.

Match the terminal board numbers and connection cable colors with those of the outdoor unit. Erroneous wiring may cause burning of the electric parts.

Securely connect the connection cables to the terminal board. In addition, secure the cables with wiring holders. Improper connections, either in the wiring or at the ends of the wiring, can cause a malfunction, electric shock, or fire.

Always fasten the outside covering of the connection cable with the cable clamp. (If the insulator is chafed, electric leakage may occur.)

Securely install the electrical box cover on the unit. An improperly installed electrical box cover can cause serious accidents such as electric shock or fire through exposure to dust or water.

Install sleeves into any holes made in the walls for wiring. Otherwise, a short circuit could result.

Install a ground leakage breaker. In addition, install the ground leakage breaker so that the entire AC main power supply is cut off at the same time. Otherwise, electric shock or fire could result.

Install a ground leakage breaker.

If a ground leakage breaker is not installed, it may cause electric shock or fire.

Always connect the earth (ground) cable.

Improper earthing (grounding) work can cause electric shocks.

Install the remote control cables so as not to be direct touched with your hand.

Perform wiring work in accordance with standards so that the air conditioner can be operated safely and positively.

Connect the connection cable firmly to the terminal board. Imperfect installation may cause a fire.

⚠ CAUTION

Ground the unit.

Do not connect the earth (ground) cable to a gas pipe, water pipe, lightning rod, or a telephone earth (ground) cable.

Improper earthing (grounding) may cause electric shocks.

Do not connect power supply cables to the transmission or remote control terminals, as this will damage the product.

Never bundle the power supply cable and transmission cable together. Bundling these cables together will cause miss operation.


When handling PCB, static electricity charged in the body may cause malfunction of the PCB. Follow the cautions below:

- Establish a ground for the indoor and outdoor units and peripheral devices.
- Cut power (breaker) off.
- Touch metal part of the indoor and outdoor units for more than 10 seconds to discharge static electricity charged in the body.
- Do not touch terminals of parts and patterns implemented on PCB.


6.1. Wiring method

6.1.1. Connection diagrams

- Connection cable (to outdoor unit)

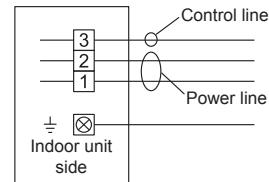


- Wired remote controller cable

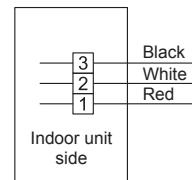

6.1.2. Connection cable preparation

Keep the earth (ground) wire longer than the other wires.

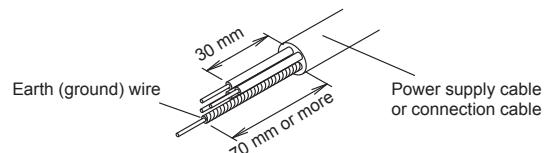


• Use a 4-core wire cable.

How to connect wiring to the terminals.

(1) Use ring terminals with insulating sleeves as shown in the figure below to connect to the terminal block.

(2) Securely crimp the ring terminals to the wires using an appropriate tool so that the wires do not come loose.



(3) Use the specified wires, connect them securely, and fasten them so that there is no stress placed on the terminals.

(4) Use an appropriate screwdriver to tighten the terminal screws.

Do not use a screwdriver that is too small, otherwise, the screw heads may be damaged and prevent the screws from being properly tightened.

(5) Do not tighten the terminal screws too much, otherwise, the screws may break.


(6) See the table below for the terminal screw tightening torques.

⚠ WARNING

Use ring terminals and tighten the terminal screws to the specified torques, otherwise, abnormal overheating may be produced and possibly cause serious damage inside the unit.

Tightening torque [N·m (kgf·cm)]

M4 screw	1.2 to 1.8 (12 to 18)
M5 screw	2.0 to 3.0 (20 to 30)

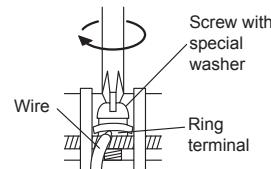


6.1.3. Connection wiring

CAUTION

Use care not to mistake the power supply cable and connection wires when installing.


Install so that the wires for the remote controller will not come in contact with other connection wires.

- Remove the control box cover and install each connection wire.

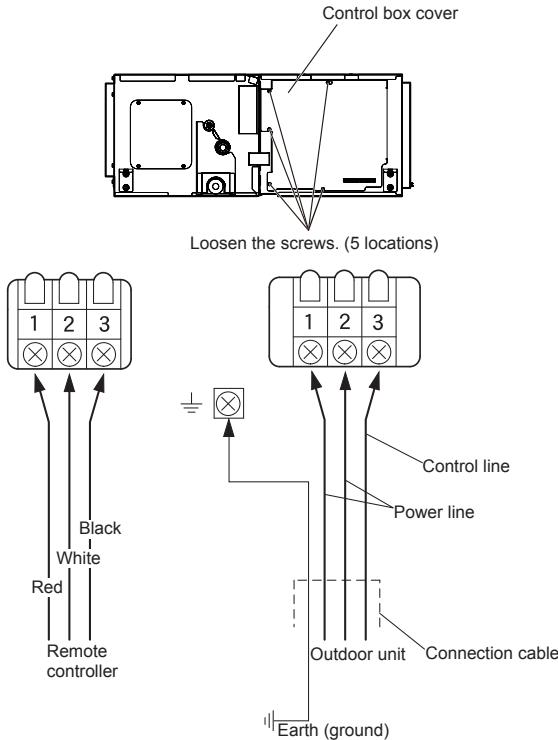

*Ground the remote controller if it has an earth (ground) wire.

- After wiring is complete, secure the remote controller cable, connection cable, and power supply cable with the cable clamps.

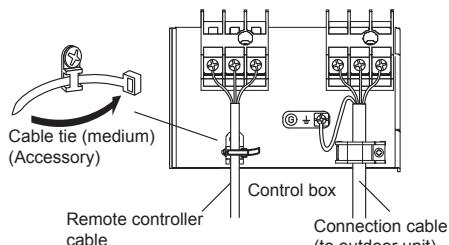

- Seal the cable outlet or other gaps with putty to prevent dew condensation or insect from entering the electric control box.

- Install the control box cover.


CAUTION

Do not bundle the remote controller cable, or wire the remote controller cable in parallel, with the indoor unit connection wire (to the outdoor unit) and the power supply cable. It may cause erroneous operation.

7. REMOTE CONTROLLER SETTING

CAUTION


When using the temperature sensor of remote controller, be sure to meet the following location requirements for installation of the remote controller in order to detect the room temperature correctly. If the remote controller is installed in an improper location, troubles such as "the room does not become cool or warm" may occur even though there is no problem with the air conditioner.

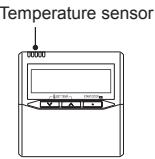

- A location where the average room temperature can be detected.
- A location that is not directly exposed to the air blown out of the indoor unit.
- A location that is not exposed to direct sunlight.
- A location that is not affected by any heat source.


When installing the remote controller and cable near a source of electromagnetic waves, separate the remote controller from the source of the electromagnetic waves and use shielded cable.

Do not touch the remote controller PC board and PC board parts directly with your hands.

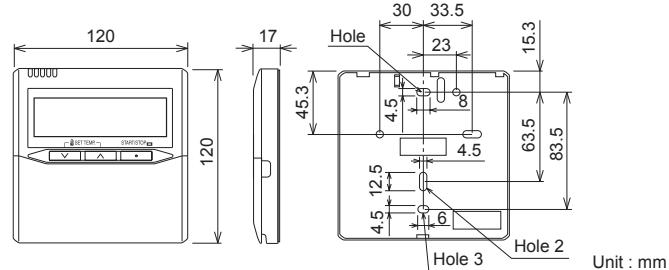

7.1. Installing the remote controller


- Open the operation panel on the front of the remote controller, remove the two screws indicated in the following figure, and then remove the front case of the remote controller.

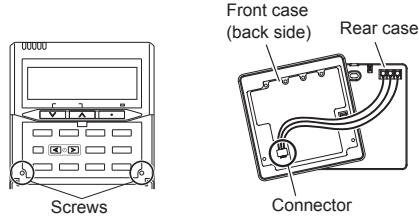

When installing the remote controller, remove the connector from the front case. The wires may break if the connector is not removed and the front case hangs down. When installing the front case, connect the connector to the front case.

- Install the rear case to the wall, etc. with the two tapping screws. Refer to the following information to install the remote controller wires.

(Example)

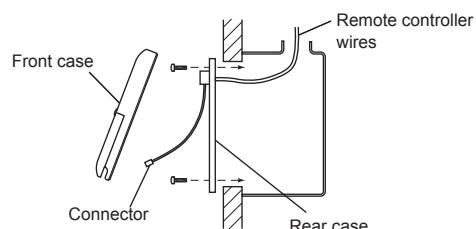


Install the remote controller wires so as not to be directly touched with your hand.

Routing the remote controller wires

- Install the remote controller wires to the terminals on the top of the rear case as shown in the following figure.


- Fasten the wires with the cable tie.

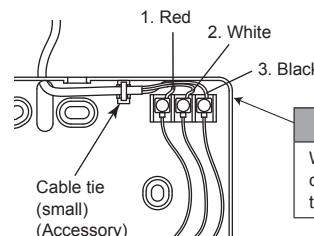

7.2. Setting the DIP switches

Set the remote controller DIP switches.

[Example]

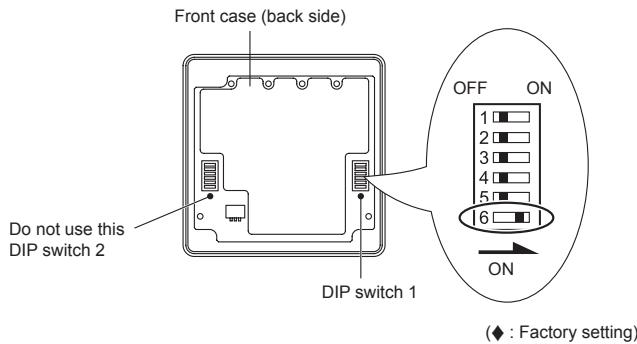

	No.	SW state		Detail
		OFF	ON	
DIP switch 1	1 to 5	◆		Cannot be used. (Do not change)
	6	◆ Invalidity	Validity	Memory backup setting *Set to ON to use batteries for the memory backup. If batteries are not used, all of the settings stored in the memory will be deleted if there is a power failure.

8. FUNCTION SETTING

⚠ CAUTION

Confirm whether the wiring work for outdoor unit has been finished.

Confirm whether the cover for electric control box on the outdoor unit is closed.

8.1. Turning on the power

- (1) Check the remote controller wiring and DIP switch settings.
- (2) Install the front case. When installing the front case, connect the connector to the front case.
- (3) Check the indoor and outdoor unit wiring and circuit board switch settings, and then turn on the indoor and outdoor units. After "9C" has flashed on the set temperature display for several seconds, the clock display will appear in the center of the remote controller display.


The clock display will appear in the center of the remote controller display.



8.2. Setting method

- This procedure is for changing the function settings used to control the indoor unit according to the installation conditions.
- Incorrect settings can cause the indoor unit malfunction.
- After the power is turned on, perform the "FUNCTION SETTING" according to the installation conditions using the remote controller.
- The settings may be selected between the following two:
- Function Number and Setting Value.
- Settings will not be changed if invalid numbers or setting values are selected.

- (1) Press the SET TEMP. buttons (▽) (△) and FAN button simultaneously for more than 5 seconds to enter the function setting mode.




Press the SET BACK button to select the indoor R.C. address.




R.C. address of INDOOR UNIT

- (2) Press the Set time (◀)(▶) buttons to select the function number.

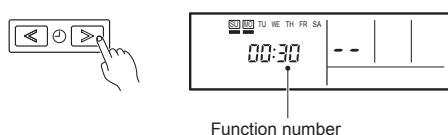


Function number

- (3) Press the SET TEMP. buttons (▽) (△) to select the setting value. The display flashes as shown to the right during setting value selection.



- (4) Press the TIMER SET button to confirm the setting. Press the TIMER SET button for a few seconds until the setting value stops flashing. If the setting value display changes or if "—" is displayed when the flashing stops, the setting value has not been set correctly. (An invalid setting value may have been selected for the indoor unit.)

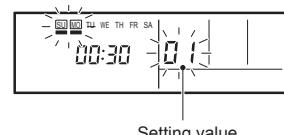

Setting value

- (5) Repeat steps 2 to 4 to perform additional settings. Press the SET TEMP. buttons (▽) (△) and FAN button simultaneously again for more than 5 seconds to cancel the function setting mode. In addition, the function setting mode will be automatically canceled after 1 minute if no operation is performed.

- (6) After completing the FUNCTION SETTING, be sure to turn off the power and turn it on again.

⚠ CAUTION

After turning off the power, wait 30 seconds or more before turning on it again. The FUNCTION SETTING doesn't become effective if it doesn't do so.

8.3. Function setting

Function Details

Filter sign

Select appropriate intervals for displaying the filter sign on the indoor unit according to the estimated amount of dust in the air of the room. If the indication is not required, select "No indication" (03).

(◆... Factory setting)

Function Number	Setting Value	Setting Description
11	00	Standard (2500 hours)
	01	Long interval (4400 hours)
	02	Short interval (1250 hours)
	03	No indication

Static pressure

Select the appropriate static pressure according to the installation conditions.
(◆... Factory setting)

Function Number	Setting Value	Setting Description
21	00	Normal (60 Pa)
	02	High static pressure 1 (100 Pa)
	03	High static pressure 2 (130 Pa)
	04	High static pressure 3 (160 Pa)

Room temperature control for cooling

Depending on the installed environment, correction of the room temperature sensor may be required.

Select the appropriate control setting according to the installed environment.

(◆... Factory setting)

Function Number	Setting Value	Setting Description
30	00	Standard
	01	Lower control
	02	Slightly higher control
	03	Higher control

Room temperature control for heating

Depending on the installed environment, correction of the room temperature sensor may be required.

Select the appropriate control setting according to the installed environment.

(♦... Factory setting)

Function Number	Setting Value	Setting Description
31	00	Standard
	01	Lower control
	02	Slightly lower control
	03	Higher control

Auto restart

Enable or disable automatic restart after a power interruption.

(♦... Factory setting)

Function Number	Setting Value	Setting Description
40	00	Enable
	01	Disable

* Auto restart is an emergency function such as for power outage etc. Do not attempt to use this function in normal operation. Be sure to operate the unit by remote controller or external device.

Room temperature sensor switching

(Only for wireless remote controller)

When using the Wired remote controller temperature sensor, change the setting to "Both" (01).

(♦... Factory setting)

Function Number	Setting Value	Setting Description
42	00	Indoor unit
	01	Both

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller are active.

* Remote controller sensor must be turned on by using the remote controller

Cold air prevention

*This setting is to disable the cold air prevention function during heating operation. When disabled, the fan setting will always follow the setting on the remote controller. (Excluding defrost mode).

(♦... Factory setting)

Function Number	Setting Value	Setting Description
43	00	Enable
	01	Disable

External input control

"Operation/Stop" mode or "Forced stop" mode can be selected.

(♦... Factory setting)

Function Number	Setting Value	Setting Description
46	00	Operation/Stop mode
	01	(Setting prohibited)
	02	Forced stop mode

Room temperature sensor switching (Aux.)

To use the temperature sensor on the wired remote controller only, change the setting to "Wired remote controller" (01). This function will only work if the function setting 42 is set at "Both" (01)

(♦... Factory setting)

Function Number	Setting Value	Setting Description
48	00	Both
	01	Wired remote controller

Switching functions for external output terminal

Functions of the external output terminal can be switched.

(♦... Factory setting)

Function Number	Setting Value	Setting Description
60	00	Operation status
	09	Error status
	10	Fresh air control
	11	Auxiliary heater

Setting record


• Record any changes to the settings in the following table.

Setting	Setting Value
Filter sign	
Static pressure	
Room temperature control for cooling	
Room temperature control for heating	
Auto restart	
Room temperature sensor switching	
Cold air prevention	
External input control	
Room temperature sensor switching (Aux.)	
Switching functions for external output terminal	

After completing the Function Setting, be sure to turn off the power and turn it on again.

8. 4. DIP switch setting

Change the following settings by using the DIP switch.

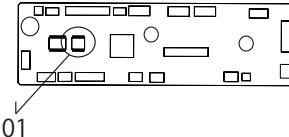

DIP switch 101	DIP SW state		Details
	Connect	Disconnect	
1	-	-	Cannot be used (Do not change)
2	-	-	
3	Disable	Enable	Fan delay setting


8. 5. Setting the room temperature detection location

The detection location of the room temperature can be selected from the following two examples. Choose the detection location that is best for the installation location.

A. Indoor unit setting (factory setting)

The room temperature is detected by the indoor unit temperature sensor.


- When the THERMO SENSOR button is pressed, the lock display flashes because the function is locked at the factory.

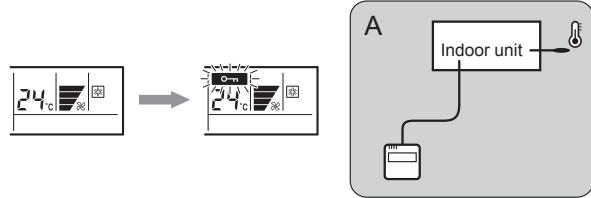

B. Remote controller setting

The room temperature is detected by the remote controller temperature sensor.

- Enable the room temperature sensor selection by changing the room temperature sensor switching in "8.3. Function setting" to "Both".
- Press the THERMO SENSOR button for 5 seconds or more to select the temperature sensor of the indoor unit or the remote controller.

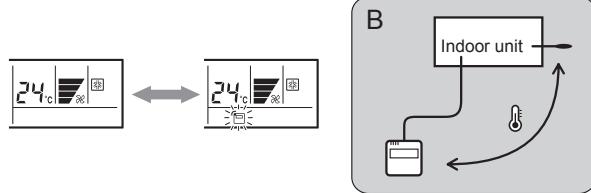

NOTE

If the function to change the temperature sensor is used as shown in examples A (other than example B), be sure to lock the detection location.

If the function is locked, the lock display will flash when the THERMO SENSOR button is pressed.

CAUTION

As the temperature sensor of remote controller detects the temperature near the wall, when there is a certain difference between the room temperature and the wall temperature, the sensor will not detect the room temperature correctly sometimes. Especially when the outer side of the wall on which the sensor is positioned is exposed to the open air, it is recommended to use the temperature sensor of the indoor unit to detect the room temperature when the indoor and outdoor temperature difference is significant.

Do not use the temperature sensor of the remote controller as a substitute for the indoor unit temperature sensor which has problem in the temperature detection. (Solve the problem of the indoor unit temperature sensor.)

If the unit is installed in a room with a ceiling of 3 m or higher, the temperature may not be detected properly with the indoor unit temperature sensor as there may be a large difference between the temperature near the ceiling and the floor. In this case, it is recommended to take a measure such as installation of an optional remote sensor and room air ventilation using a circulator.

9. SPECIAL INSTALLATION METHODS

CAUTION

Be sure to turn off the electrical breaker before making settings.

When setting DIP switches, do not touch any other parts on the circuit board directly with your bare hands.


9.1. Group control system

CAUTION

Group control is only possible between units with remote controllers of the same type. To confirm the type of remote controller, see the back of the remote controller or "2.3. Accessories".

A number of indoor units can be operated at the same time using a single remote controller.


(1) Wiring method (indoor unit to remote controller)

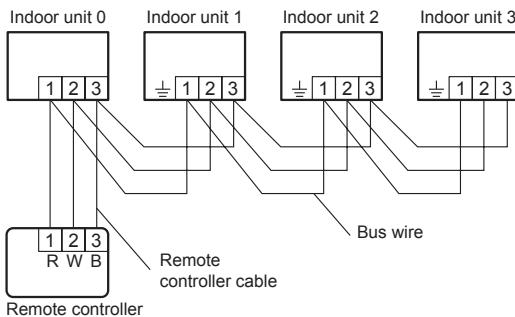

(2) Set the R.C. address (DIP switch setting)

Set the R.C. address of each indoor unit using the DIP switch on the indoor unit circuit board.

The DIP switch is normally set to 0.

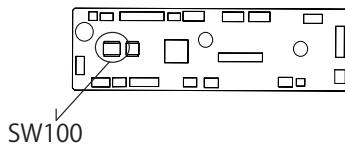

Set the R.C. address in accordance with the table below.

R.C. address	DIP switch 100			
	1	2	3	4
0	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF
2	OFF	ON	OFF	OFF
3	ON	ON	OFF	OFF
4	OFF	OFF	ON	OFF
5	ON	OFF	ON	OFF
6	OFF	ON	ON	OFF
7	ON	ON	ON	OFF
8	OFF	OFF	OFF	ON
9	ON	OFF	OFF	ON
10	OFF	ON	OFF	ON
11	ON	ON	OFF	ON
12	OFF	OFF	ON	ON
13	ON	OFF	ON	ON
14	OFF	ON	ON	ON
15	ON	ON	ON	ON

NOTE

Be sure to set consecutive R.C. address.

The indoor units cannot be operated if a number is skipped.

9.2. Fan delay setting

This setting can be used when the auxiliary heater is mounted.

When the operation is stopped when the indoor unit is operating with an auxiliary heater, the operation continues 1 minutes.

Refer to "8.4. DIP switch setting" to change the settings.


10. OPTIONAL PARTS

WARNING

Regulation of cable differs from each locality, refer in accordance with local rules.


10.1. External input and external output

- Connection terminals

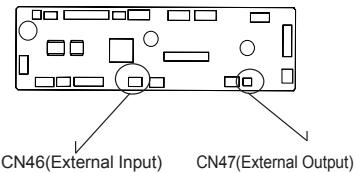

For external output terminal functions, refer to "8.3. Function setting"

10.2. Remote sensor (Optional parts)



Remote sensor

- Remove the existing connector and replace it with the remote sensor connector (ensure that the correct connector is used).
- The original connector should be insulated to ensure that it does not come into contact with other electrical circuitry.

Setting for room temperature correction

When a remote sensor is connected, set the function setting of indoor unit as indicated below.

- Set Function Number "30" (Room temperature control for cooling) to "00"
- Set Function Number "31" (Room temperature control for heating) to "01"

11. CHECK LIST



Pay special attention to the check items below when installing the indoor unit(s). After installation is complete, be sure to check the following check items again.

Check items	Check box
Has the indoor unit been installed correctly?	
Has there been a check for gas leaks (refrigerant pipes)?	
Has heat insulation work been completed?	
Does water drain easily from the indoor units?	
Is the voltage of the power source the same as that indicated on the label on the indoor unit?	
Are the wires and pipes all connected completely?	
Is the indoor unit grounded?	
Is the connection cable the specified thickness?	
Are the inlets and outlets free of any obstacles?	
After installation is completed, has the proper operation and handling been explained to the user?	
Operate the unit according to the operating manual provided, and check that it is operating normally.	

12. TEST RUN

For the operation method, refer to the operating manual.

- Stop the air conditioner operation.
- Press the MODE button and the FAN button simultaneously for 2 seconds or more to start the test run.



Test run display

- Press the START/STOP button to stop the test run.

If "C0" appears in the R.C. address display, there is a remote controller error.

R.C. address	Error code	Content
C0	1d	Incompatible indoor unit is connected
C0	1C	Indoor unit ↔ remote controller communication error

13. CUSTOMER GUIDANCE


Explain the following to the customer in accordance with the operating manual:

- Starting and stopping method, operation switching, temperature adjustment, timer, air flow switching, and other remote controller operations.
- Cleaning and maintenance of the product, and other items such as air filters and air louvers if applicable.
- Give the operating and installation manuals to the customer.

14. ERROR CODES

[SELF-DIAGNOSIS]

If an error occurs, the following display will be shown. ("Er" will appear in the set room temperature display.)

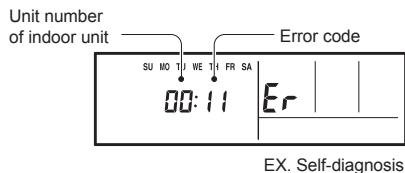

If you use a wired type remote controller, error codes will appear on the remote controller display. If you use a wireless remote controller, the lamps on the IR receiver unit will output error codes by way of blinking patterns. See the lamp blinking patterns and error codes in the table below. An error display is displayed only during operation.

Error display			Wired remote controller Error code	Description
OPERATION lamp (green)	TIMER lamp (orange)	ECONOMY lamp (green)		
●(1)	●(1)	◊	11	Serial communication error
●(1)	●(2)	◊	12	Wired remote controller communication error
●(1)	●(5)	◊	15	Check run unfinished
●(1)	●(6)	◊	16	Peripheral unit transmission PCB connection error
●(2)	●(1)	◊	21	Unit number or Refrigerant circuit address setting error [Simultaneous Multi]
●(2)	●(2)	◊	22	Indoor unit capacity error
●(2)	●(3)	◊	23	Combination error
●(2)	●(4)	◊	24	• Connection unit number error (indoor secondary unit) [Simultaneous Multi] • Connection unit number error (indoor unit or branch unit) [Flexible Multi]
●(2)	●(7)	◊	27	Primary unit, secondary unit setup error [Simultaneous Multi]
●(3)	●(1)	◊	31	Power supply interruption error
●(3)	●(2)	◊	32	Indoor unit PCB model information error
●(3)	●(5)	◊	35	Manual auto switch error
●(4)	●(1)	◊	41	Room temp. sensor error
●(4)	●(2)	◊	42	Indoor unit Heat Ex. Middle temp. sensor error
●(5)	●(1)	◊	51	Indoor unit fan motor error
●(5)	●(3)	◊	53	Drain pump error
●(5)	●(7)	◊	57	Damper error
●(5)	●(15)	◊	58	Indoor unit error
●(6)	●(1)	◊	61	Outdoor unit reverse/missing phase and wiring error
●(6)	●(2)	◊	62	Outdoor unit main PCB model information error or communication error
●(6)	●(3)	◊	63	Inverter error
●(6)	●(4)	◊	64	Active filter error, PFC circuit error
●(6)	●(5)	◊	65	Trip terminal L error
●(6)	●(10)	◊	68	Display PCB microcomputers communication error
●(7)	●(1)	◊	71	Discharge temp. sensor error

Error display			Wired remote controller Error code	Description
OPERATION lamp (green)	TIMER lamp (orange)	ECONOMY lamp (green)		
●(7)	●(2)	◊	72	Compressor temp. sensor error
●(7)	●(3)	◊	73	Outdoor unit Heat Ex. liquid temp. sensor error
●(7)	●(4)	◊	74	Outdoor temp. sensor error
●(7)	●(5)	◊	75	Suction Gas temp. sensor error
●(7)	●(6)	◊	76	• 2-way valve temp. sensor error • 3-way valve temp. sensor error
●(7)	●(7)	◊	77	Heat sink temp. sensor error
●(8)	●(2)	◊	82	• Sub-cool Heat Ex. gas inlet temp. sensor error • Sub-cool Heat Ex. gas outlet temp. sensor error
●(8)	●(3)	◊	83	Liquid pipe temp. sensor error
●(8)	●(4)	◊	84	Current sensor error
●(8)	●(6)	◊	86	• Discharge pressure sensor error • Suction pressure sensor error • High pressure switch error
●(9)	●(4)	◊	94	Trip detection
●(9)	●(5)	◊	95	Compressor rotor position detection error (permanent stop)
●(9)	●(7)	◊	97	Outdoor unit fan motor 1 error
●(9)	●(8)	◊	98	Outdoor unit fan motor 2 error
●(9)	●(9)	◊	99	4-way valve error
●(9)	●(10)	◊	9A	Coil (expansion valve) error
●(10)	●(1)	◊	A1	Discharge temp. error
●(10)	●(3)	◊	A3	Compressor temp. error
●(10)	●(4)	◊	A4	High pressure error
●(10)	●(5)	◊	A5	Low pressure error
●(13)	●(2)	◊	J2	Branch boxes error [Flexible Multi]

Display mode ● : 0.5s ON / 0.5s OFF

◊ : 0.1s ON / 0.1s OFF

() : Number of flashing